

YAMAHA MT-07 '21-

M O U N T I N G I N S T R U C T I O N S

REF 20618

CARENABRÍS NG SPORT / WINDSHIELD NG SPORT



1 Person











10 min



EASY

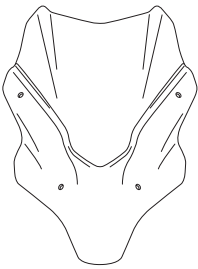

ALLEN
Nº 3
Nº 5


| ID | PIEZA/PART | DESCRIPCIÓN | DESCRIPTION | QTY | REF |
|----|---|-----------------------------------|--------------------------------|-----|--------------------------|
| 1 |  | Cúpula Sport | Sport screen | 1 | 20618F/H/W/N/ A/R/CM3 |
| 2 |  | Soporte izquierdo | Left support | 1 | SOPOR2P7-L20618 |
| 3 |  | Soporte derecho | Right support | 1 | SOPOR2P7-R20618 |
| 4 |  | Tornillo Allen M5x20 Ø11 ISO 7380 | M5x20 Ø11 ISO 7380 Allen screw | 4 | TORNI-I7380-730 |
| 5 |  | Silentblock Ø9 x Ø6 x 8mm | Ø9 x Ø6 x 8mm Silentblock | 4 | AROPASACABLES-3 |
| 6 |  | Casquillo con valona Ø12xØ6,8x7,3 | Ø12xØ6,8x7,3 bush with flange | 4 | CASQUI-1A---750 |
| 7 |  | Tornillo Allen M5x16 Ø11 ISO 7380 | M5x16 Ø11 ISO 7380 Allen screw | 4 | TORNI-I7380-493 |
| 8 |  | Tapón tornillo M5 ISO 7380 | M5 ISO 7380 screw cap | 4 | TAPON-----85 |

YAMAHA MT-07'21-

INSTRUCCIONES DE MONTAJE - MOUNTING INSTRUCTIONS - MONTAGEANLEITUNG


1

DISASSEMBLY
DESMONTAJE

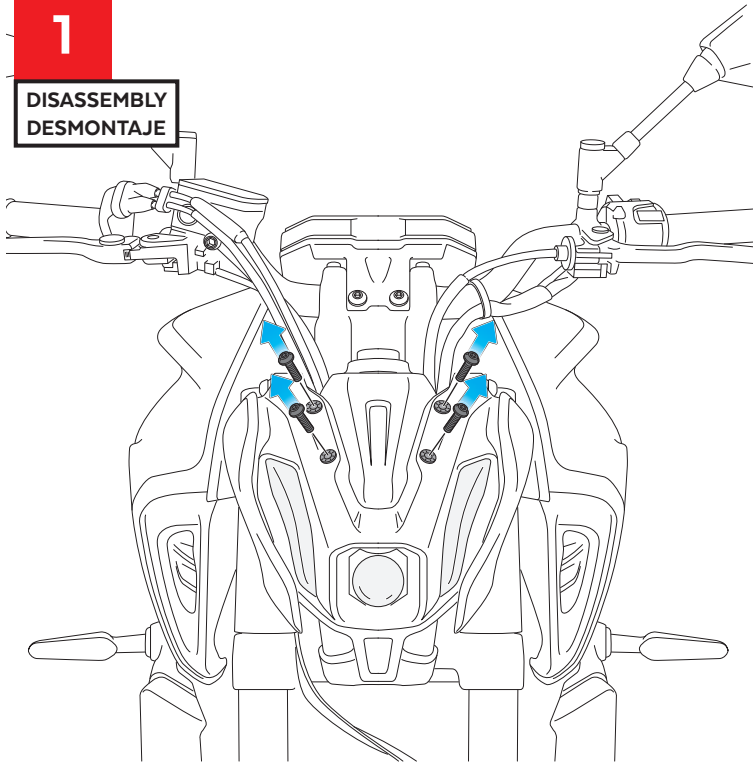


2

ASSEMBLY
MONTAJE

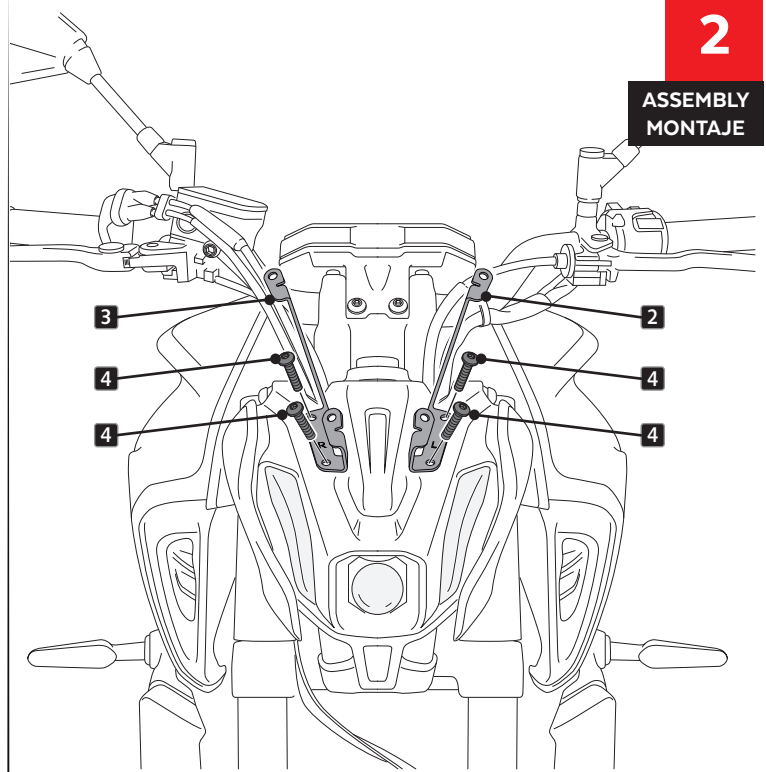

3

ASSEMBLY
MONTAJE

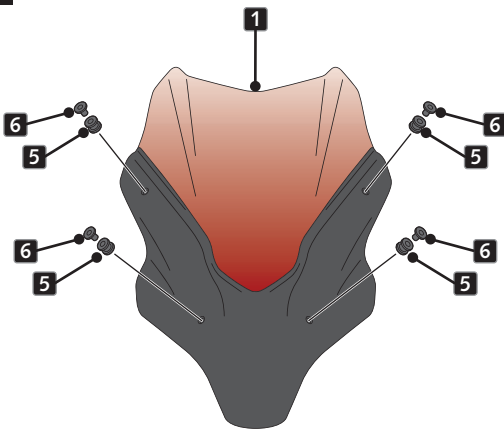

4

ASSEMBLY
MONTAJE

