

# GAS GAS SM700'22-


## MOUNTING INSTRUCTIONS

REF 21474

WINDSHIELD NG SPORT



Ø 6mm  
Ø 11mm




| ID. | PIEZA/PART | DESCRIPCIÓN                               | DESCRIPTION                             | QTY. | REF.:           |
|-----|------------|---|---|------|-----------------|
| 1   |            | Cúpula sport                              | Sport screen                            | 1    | 21474F/H/W/NM3  |
| 2   |            | Plantilla                                 | Template                                | 1    | PLANTILLA-21474 |
| 3   |            | Silentblock Ø18xØ9xØ11 x8                 | Ø18xØ9xØ11x8 silentblock                | 6    | SILENBGONE--064 |
| 4   |            | Casquillo con valona Ø15xØ9x7,5           | Ø15xØ9x7,5 Bush with flange             | 3    | CASQUI-1A---324 |
| 5   |            | Casquillo con valona M5                   | M5 Bush with flange                     | 3    | CASQUI-----517  |
| 6   |            | Arandela metálica M6 DIN9021 Ø18xØ6,5x1,6 | M6 DIN9021 Ø18xØ6,5x1,6 metallic washer | 1    | ARANDPD9021-037 |
| 7   |            | Casquillo nylon Ø9,5xØ14,3x12,7 mm        | Ø9,5xØ14,3x12,7 mm nylon arrowhead      | 1    | DISTANCIADOR--- |
| 8   |            | Tornillo M5x35 DIN7991                    | M5x35 DIN7991 screw                     | 1    | TORNIA535--293  |
| 9   |            | Arandela cónica de plástico Ø20xØ6x5mm    | Ø20xØ6x5mm Plastic conical washer       | 3    | ARANDENND20-030 |
| 10  |            | Tornillo M5x16 DIN7991                    | M5x16 DIN7991 screw                     | 2    | TORNI-D7991-867 |
| 11  |            | Tapón tornillo M5 DIN7991                 | M5 DIN7991 screw cap                    | 3    | TAPON-----92    |
| 12  |            | Brida cables                              | Cable ties                              | 1    | ABR-00101100539 |

## GAS GAS SM700'22-

INSTRUCCIONES DE MONTAJE - MOUNTING INSTRUCTIONS - MONTAGEANLEITUNG

**1**


DISASSEMBLY  
DESMONTAJE

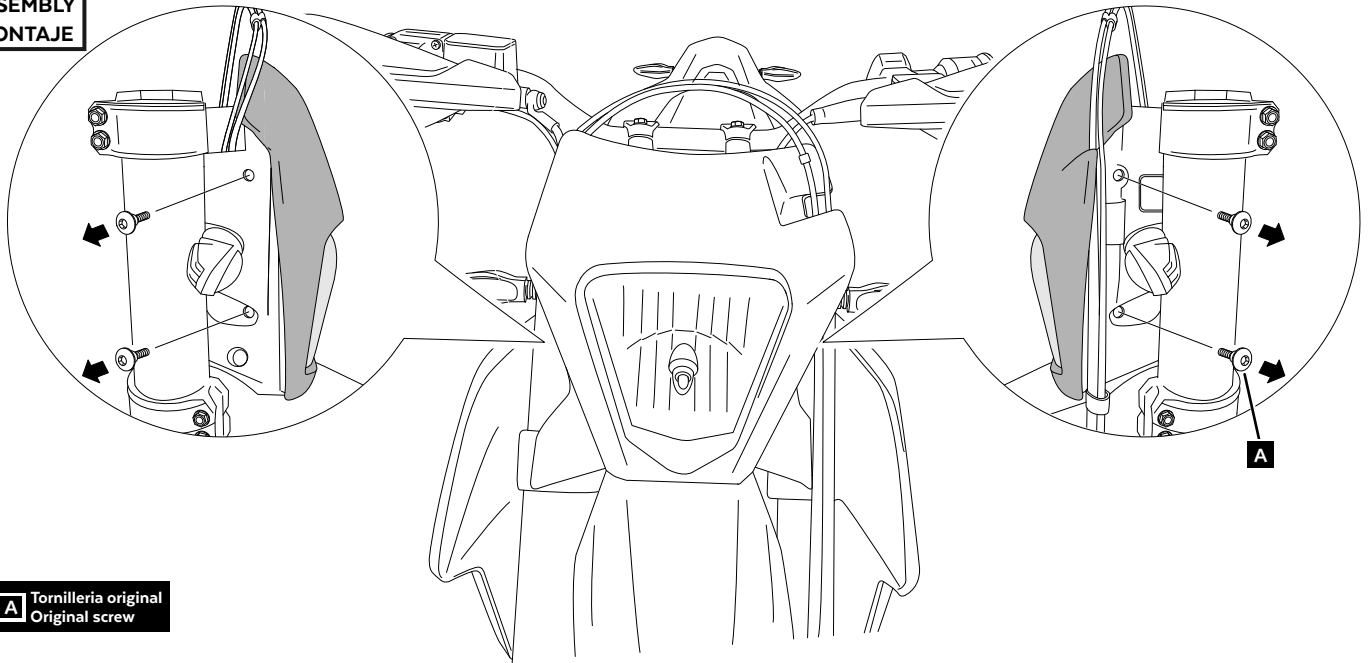

**A** Tornilleria original  
Original screw

**2**


DISASSEMBLY  
DESMONTAJE

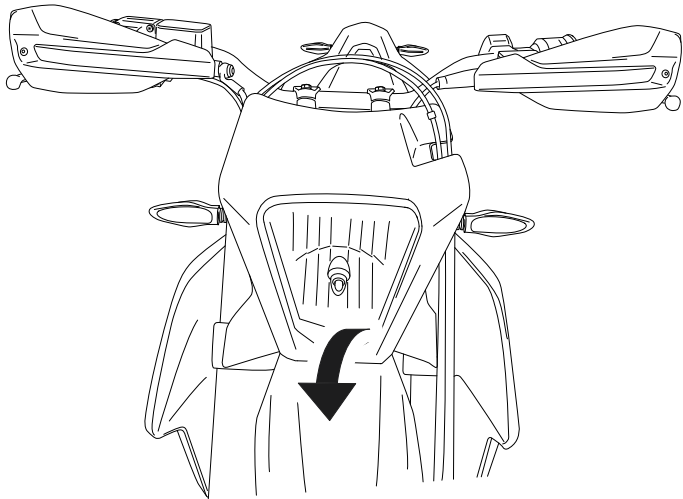

**A** DISCONNECT THE HEADLIGHT

**3**

ASSEMBLY  
MONTAJE

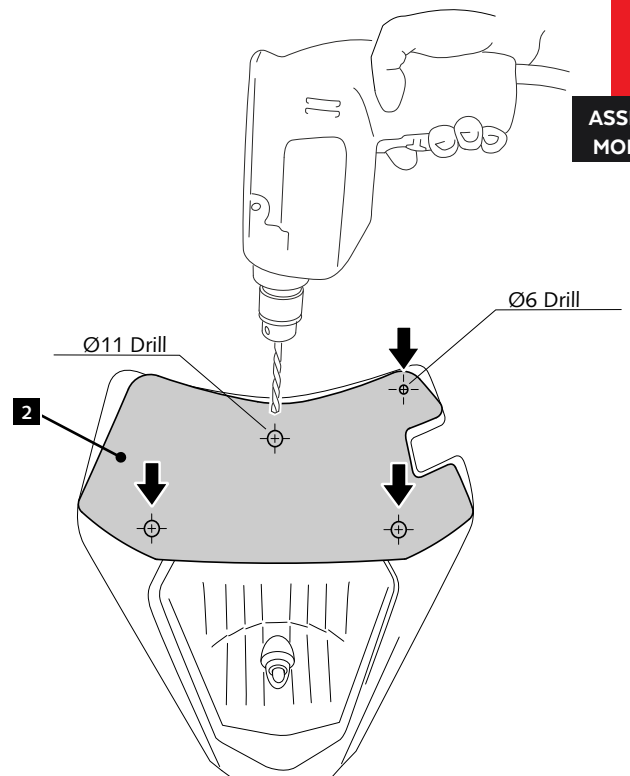


# GAS GAS SM700'22-

INSTRUCCIONES DE MONTAJE - MOUNTING INSTRUCTIONS - MONTAGEANLEITUNG

**4**


ASSEMBLY  
MONTAJE

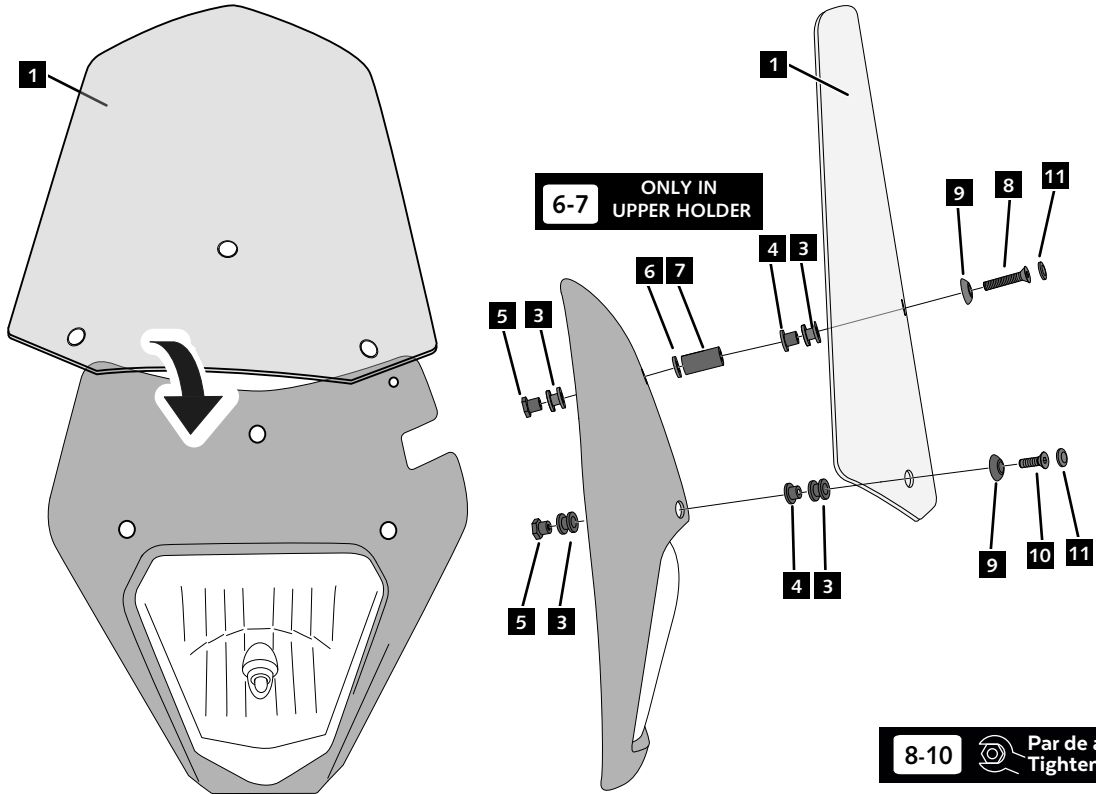


**5**

ASSEMBLY  
MONTAJE

**A** Tornilleria original  
Original screw

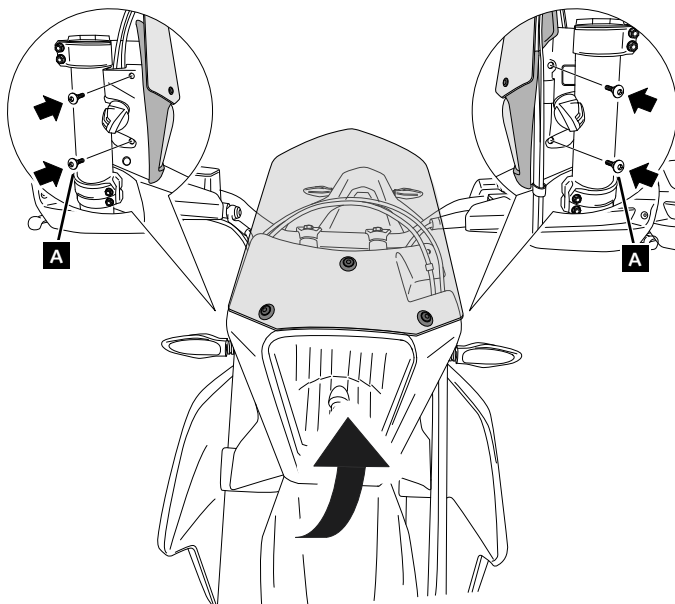

**A** CONNECT THE HEADLIGHT

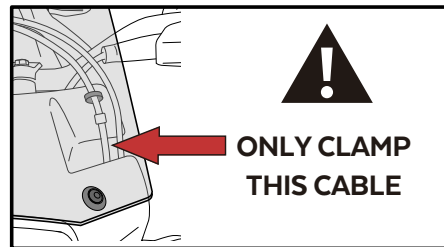

**6**

ASSEMBLY  
MONTAJE

