


# BMW R1250R '19-


## M O U N T I N G I N S T R U C T I O N S

REF 3624

WINDSHIELD NEW GENERATION SPORT

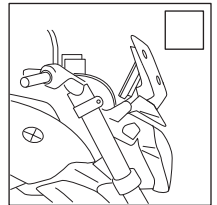

TORX  
T25  
T40

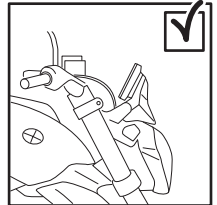

ALLEN  
Nº 3  
Nº 6


ID	PIEZA/PART	DESCRIPCIÓN	DESCRIPTION	QTY	REF
1		Cúpula sport	Sport Screen	1	3623F/H/N/WM3
2		Soporte metálico derecho (R)	Right metal support (R)	1	SOPOR2P2-R-3625
3		Soporte metálico izquierdo (L)	Left metal support (L)	1	SOPOR2P2-L-3625
4		Tornillo M8x30 DIN912	M8x30 DIN912 Allen screw	2	TORNI-D912-575
5		Casquillo Ø8,5x Ø14x 12	Ø8,5x Ø14x 12 arrowhead	2	CASQUI-----0083
6		Tornillo M8x55 DIN912	M8x55 DIN912 Allen screw	2	TORNI-D912--631
7		Casquillo Ø8,5x Ø14x 30	Ø8,5x Ø14x 30 arrowhead	2	CASQUI-----149
8		Silentblock Ø9 x Ø6 x8mm	Ø9 x Ø6 x8mm silentblock	4	AROPASACABLES-3
9		Casquillo con valona Ø12xØ6,8x7,3	Ø12xØ6,8x7,3 bush with flange	4	CASQUI-1A---750
10		Tornillo M5x16 Ø11 ISO 7380	M5x16 Ø11 ISO 7380 Allen screw	4	TORNI-I7380-493
11		Tapón tornillo M5 ISO 7380	M5 ISO 7380 Allen cap screw	4	TAPON-----85

# BMW R1250R '19-

INSTRUCCIONES DE MONTAJE - MOUNTING INSTRUCTIONS - MONTAGEANLEITUNG


**1**

DISASSEMBLY  
DESMONTAJE

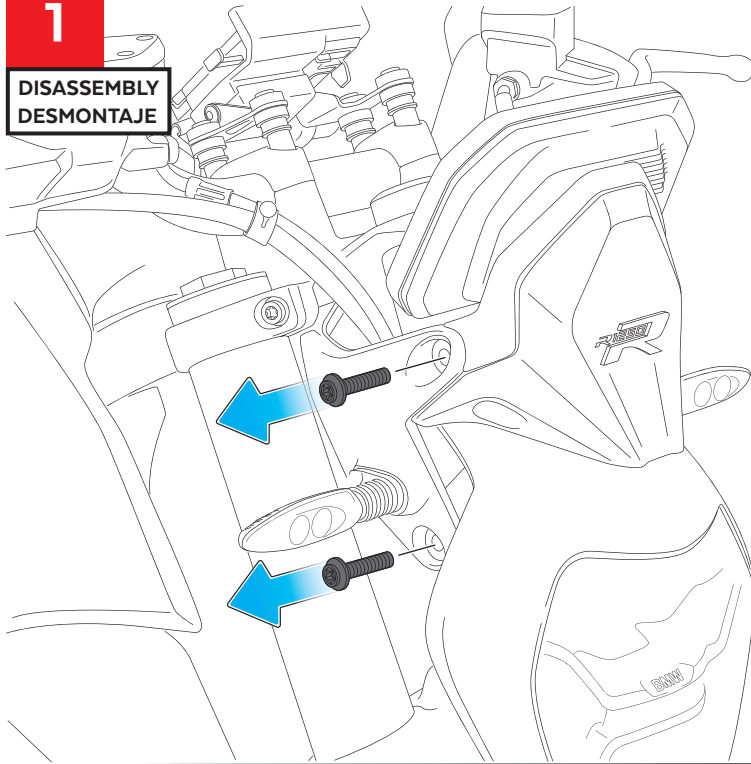


**2**

ASSEMBLY  
MONTAJE

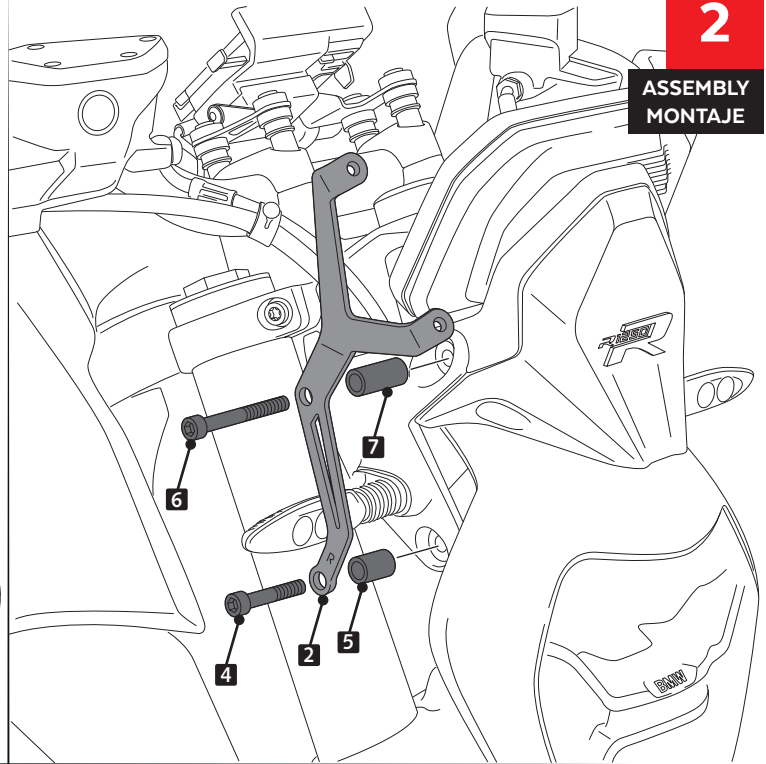


**3**

DISASSEMBLY  
DESMONTAJE

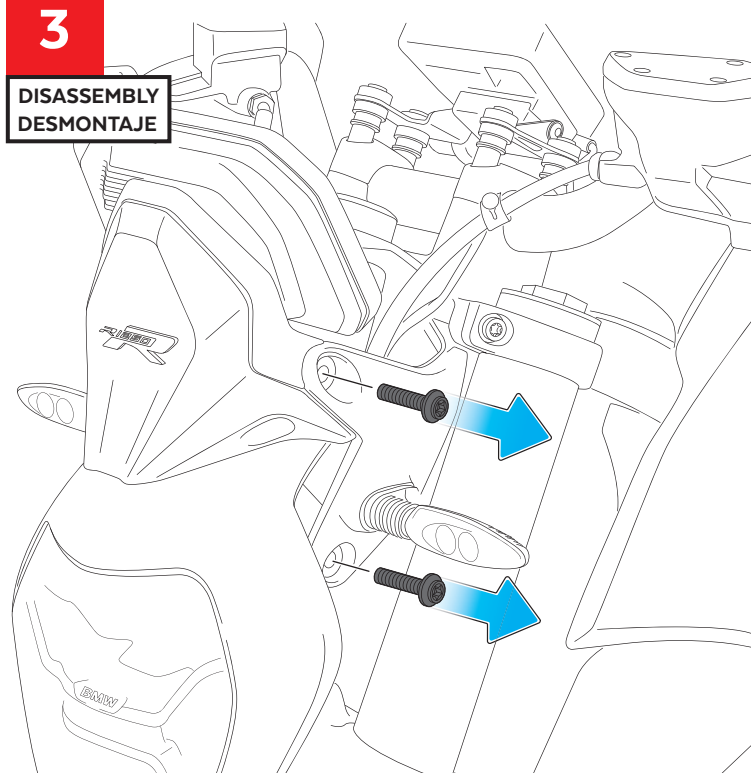

**4**

ASSEMBLY  
MONTAJE

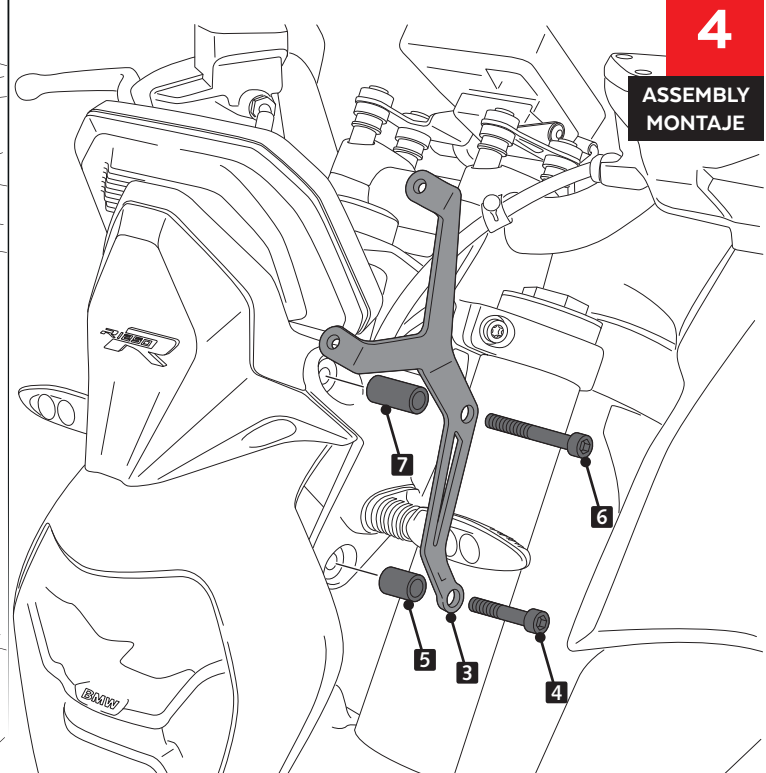

# BMW R1250R '19-

INSTRUCCIONES DE MONTAJE - MOUNTING INSTRUCTIONS - MONTAGEANLEITUNG

**5**

ASSEMBLY  
MONTAJE

