


PROTECTOR DE FARO PARA - HEADLIGHT PROTECTOR FOR - SCHEINWERFERSCHUTZ FÜR  
**DUCATI MULTISTRADA**  
 950 / 1200 '16- / 1200s '16- / 1200 Enduro '16- / 1200 Pikes Peak / 1260



**Ref.: 9401**

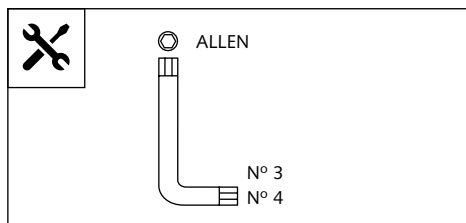

1 persona / 1 person  
 20 min  
 Fácil - Easy  
 Media-Intermediate  
 Difícil-Difficult

ID.	PIEZA / PART	DESCRIPCIÓN	DESCRIPTION	QTY.	REF.:
1		Conjunto protectores de faro policarbonato	Polycarbonate protectors set	1	9401WM3
2		Soporte metálico derecho ( R )	Right metal support ( R )	1	SOPOR-3P-4-9401
3		Soporte metálico izquierdo ( L )	Left metal support ( L )	1	SOPOR-3P-4-9401
4		Soporte metálico central	Central metal support	1	SOPOR-3P-4-9401
5		Tornillo ISO7380 M4x8 (negro)	M4x8 ISO7380 allen screw (black)	8	TORNI-I7380-757
6		Arandela de nylon M4 (negra)	M4 nylon washer (black)	16	ARNV00000000311
7		Separador de silicona Ø8x2 (Se suministra montado con la pieza 4)	Ø8x2 silicon adhesive spacer (Supplied already mounted on item 4)	2	ADHESI-GT-D8---
8		Separador de silicona Ø12,5x4 (Se suministra montado con la pieza 4)	Ø12,5x4 silicon adhesive spacer (Supplied already mounted on item 4)	1	TOPE-PA12,7X3,5
9		Separador de silicona Ø16x8 (Se suministra montado con la pieza 4)	Ø16x8 silicon adhesive spacer (Supplied already mounted on item 4)	1	TOPE-PA-16DX8--

PROTECTOR DE FARO PARA - HEADLIGHT PROTECTOR FOR - SCHEINWERFERSCHUTZ FÜR  
**DUCATI MULTISTRADA**  
 950 / 1200 '16- / 1200s '16- / 1200 Enduro '16- / 1200 Pikes Peak / 1260

INSTRUCCIONES DE MONTAJE - MOUNTING INSTRUCTIONS - MONTAGEANLEITUNG

