








INDIAN SCOUT '15- / INDIAN SCOUT BOBBER '18-

M O U N T I N G I N S T R U C T I O N S

REF 20296

GUARDABARROS DELANTERO / FRONT FENDER



ID.	PIEZA/PART	DESCRIPCIÓN	DESCRIPTION	QTY.	REF.
1		Guardabarros	Front fender	1	3735N
2		Soporte izquierdo	Left support	1	SOPOR2P4-L20296
3		Soporte derecho	Right support	1	SOPOR2P4-R20296
4		Tuerca M5 autoblocante	M5 lock nut	4	TUERCA-D985-585
5		Tornillo allen M5x11 Ø11 ISO 7380	M5x11 Ø11 ISO 7380 allen screw	4	TORNI-AI----520
6		Tapón tornillo M5 ISO 7380	M5 ISO 7380 screw cap	4	TAPON-----85


INDIAN SCOUT / INDIAN SCOUT BOBBER

INSTRUCCIONES DE MONTAJE - MOUNTING INSTRUCTIONS - MONTAGEANLEITUNG

1

DISASSEMBLY
DESMONTAJE


A Tornillería original
Original screws

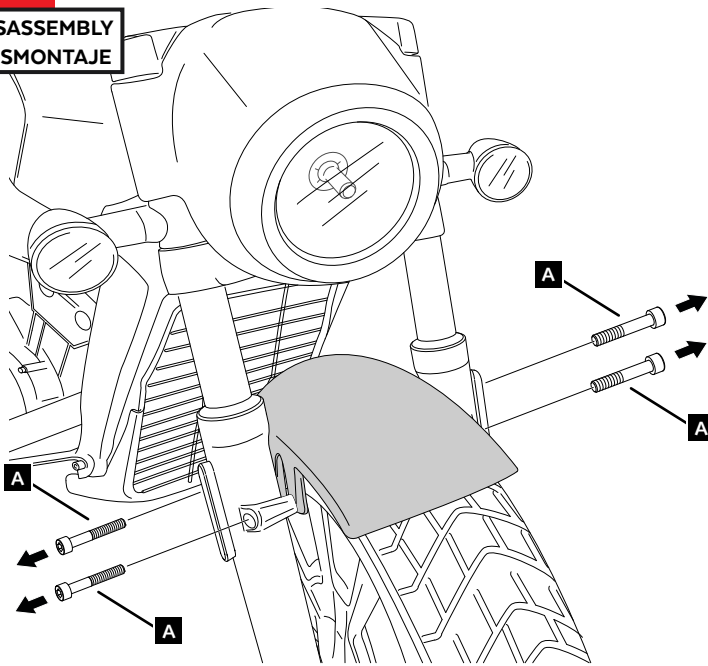

2

ASSEMBLY
MONTAJE

A Tornillería original
Original screws

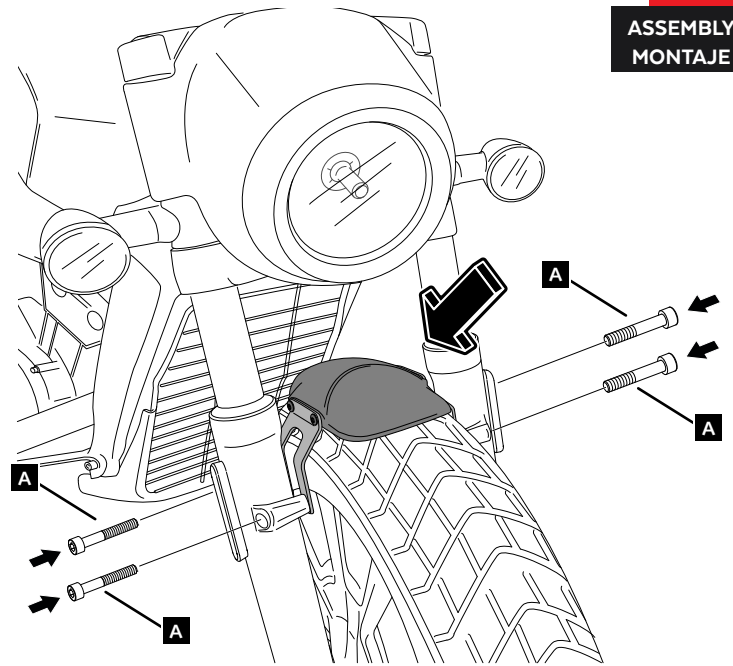

EXPLOTING

