


TRIUMPH STREET TRIPLE R/RS '23-

M O U N T I N G I N S T R U C T I O N S

REF 22234

WINDSHIELD NG SPORT




ID.	PIEZA/PART	DESCRIPCIÓN	DESCRIPTION	QTY.	REF.:
1		Cúpula Sport	Sport screen	1	22234W/H/F/N M3
2		Soporte delantero Izquierdo	Front left support	1	SOPOR3P9DL22234
3		Soporte delantero Derecho (º)	Front right support (º)	1	SOPOR3P9DR22234
4		Soporte trasero	Rear support	1	SOPOR3P9-T22234
5		Tornillo Allen M5x16 Ø11 ISO 7380	M5x16 Ø11 ISO 7380 allen screw	3	TORNI-I7380-493
6		Silentblock Ø9xØ6x8mm	Ø9xØ6x8mm Silentblock	4	AROPASACABLES-3
7		Casquillo con valona Ø12xØ6,8x7,3	Ø12xØ6,8x7,3 Bush with flange	4	CASQUI-1A---750
8		Tornillo allen M5x12 Ø11 ISO 7380	M5x12 Ø11 ISO 7380 allen screw	6	TORNI-AI----520
9		Tapón tornillo M5 ISO 7380	M5 ISO 7380 screw cap	4	TAPON-----85

TRIUMPH STREET TRIPLE R/RS '23-

INSTRUCCIONES DE MONTAJE - MOUNTING INSTRUCTIONS - MONTAGEANLEITUNG


1

DISASSEMBLY
DESMONTAJE

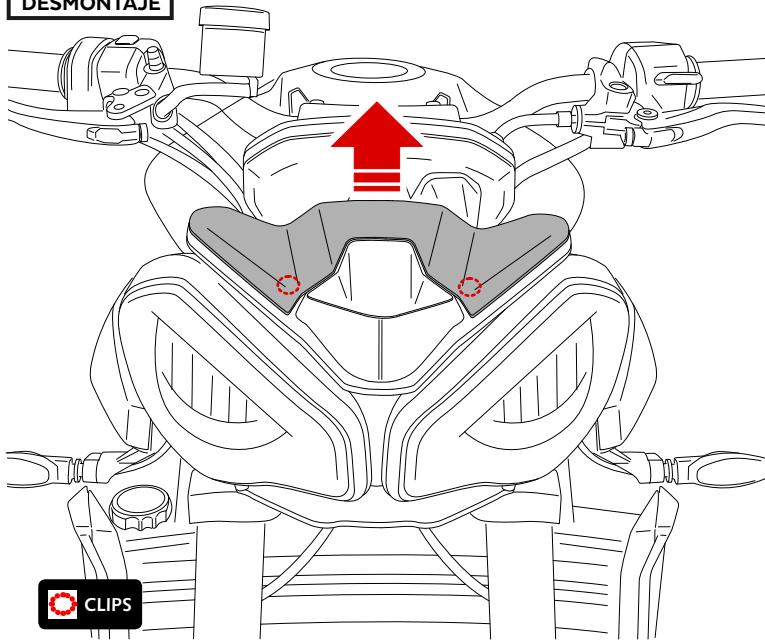


2

DISASSEMBLY
DESMONTAJE

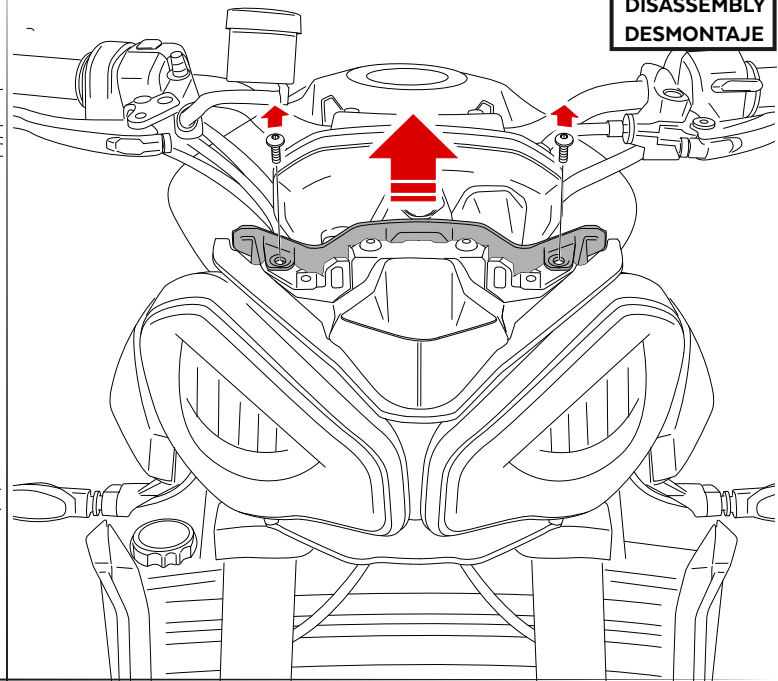


3

DISASSEMBLY
DESMONTAJE

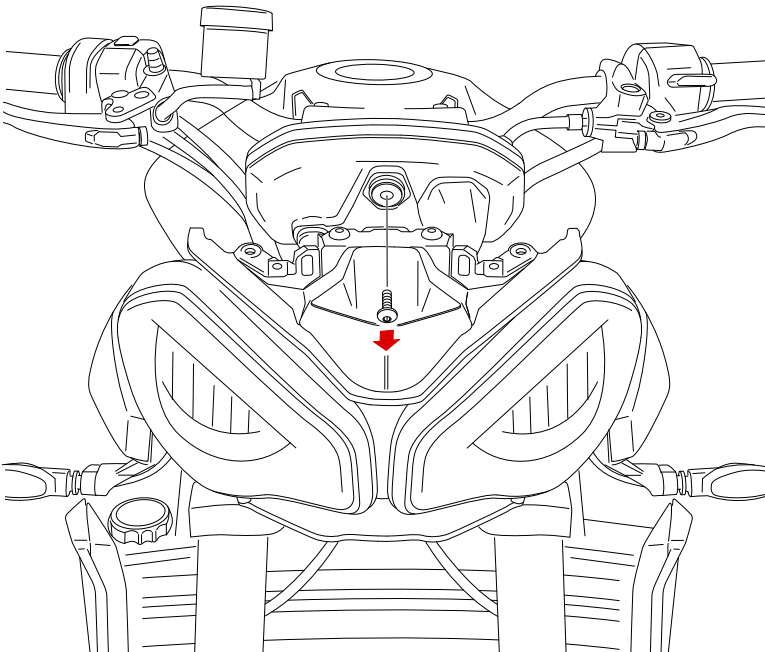

4

DISASSEMBLY
DESMONTAJE

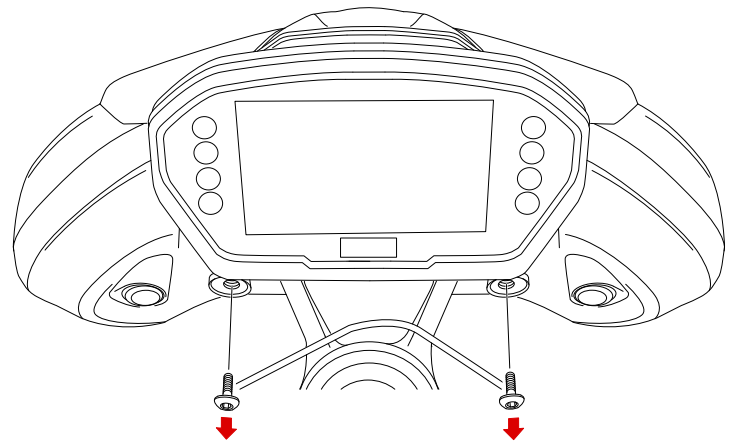


TRIUMPH STREET TRIPLE R/RS '23-

INSTRUCCIONES DE MONTAJE - MOUNTING INSTRUCTIONS - MONTAGEANLEITUNG


5

ASSEMBLY
MONTAJE

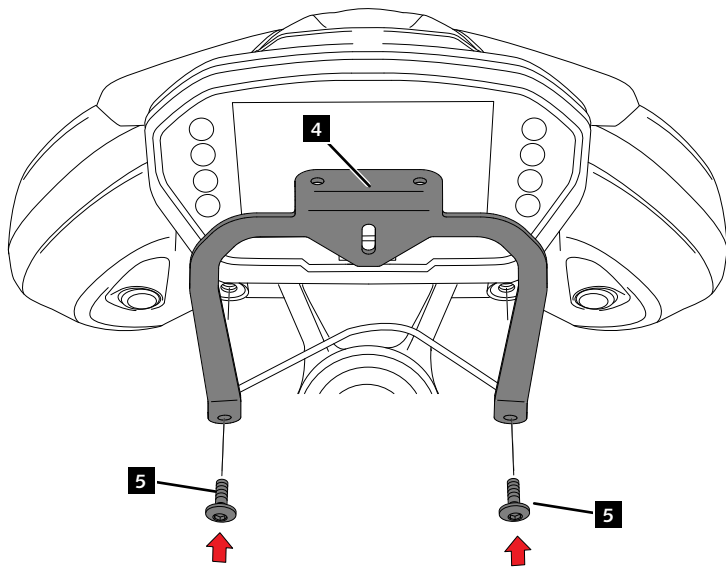


6

ASSEMBLY
MONTAJE

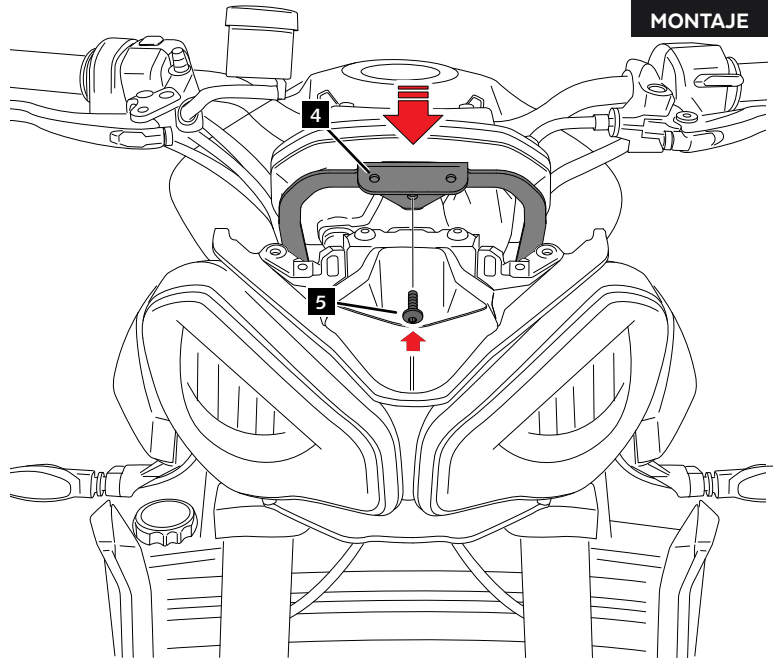

7


ASSEMBLY
MONTAJE

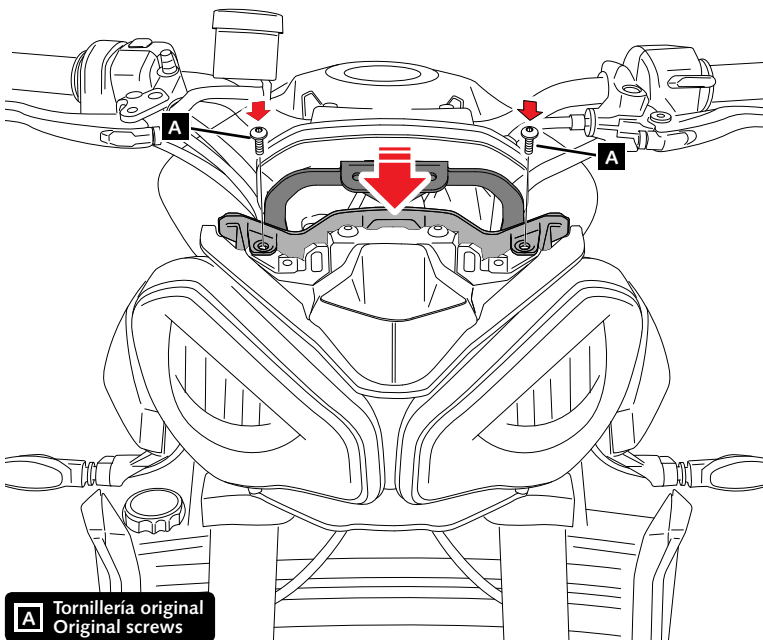

A Tornillería original
Original screws

8

ASSEMBLY
MONTAJE

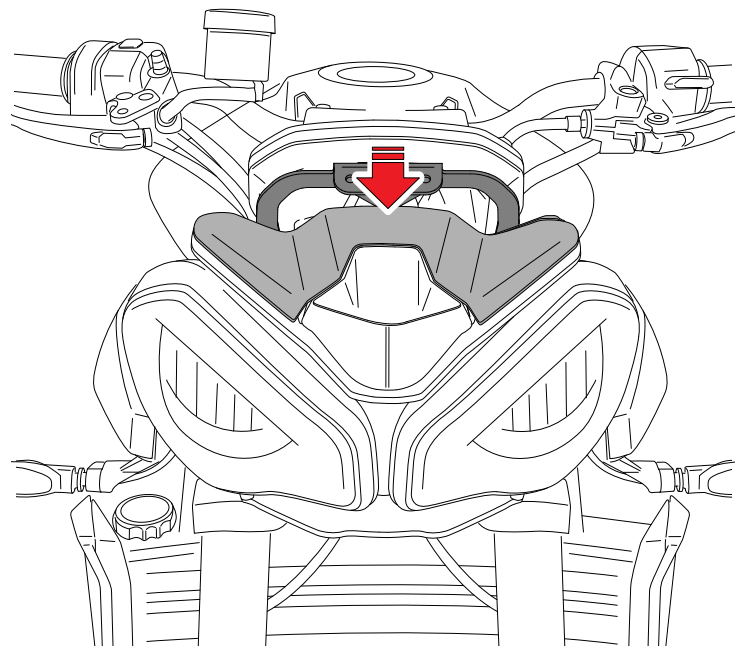


TRIUMPH STREET TRIPLE R/RS '23-

INSTRUCCIONES DE MONTAJE - MOUNTING INSTRUCTIONS - MONTAGEANLEITUNG

9

ASSEMBLY
MONTAJE

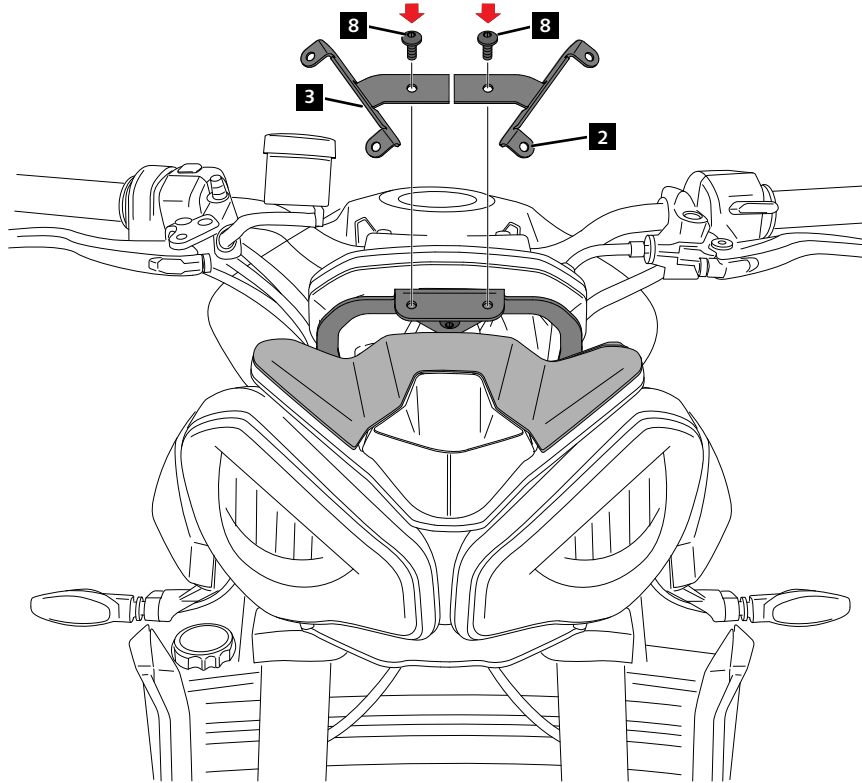

10

ASSEMBLY
MONTAJE

