

HARLEY DAVIDSON NIGHTSTER '24-

M O U N T I N G I N S T R U C T I O N S

REF 21956

SEMIFAIRING ANARCHY MODEL/ SEMICARENADO ANARCHY




ID	PIEZA/PART	DESCRIPCIÓN	DESCRIPTION	QTY	REF
1		Semicarenado Anarchy	Anarchy semifairing	1	10896NM3
2		Soporte derecho	Right support	1	SOPOR2P3-R21956
3		Soporte izquierdo	Left support	1	SOPOR2P3-L21956
4		Silentblock Ø12xØ6x9	Ø12xØ6x9 Silentblock	4	AROPASACABLES-1
5		Casquillo con valona Ø12xØ6,8x7,3	Ø12xØ6,8x7,3 Bush with flange	4	CASQUI-1A---750
6		Tornillo Allen M5x16 Ø11 ISO 7380	M5x16 Ø11 ISO 7380 Allen screw	4	TORNI-I7380-493
7		Tapón tornillo M5 ISO 7380	M5 ISO 7380 screw cap	4	TAPON-----85

HARLEY DAVIDSON NIGHTSTER '24-

INSTRUCCIONES DE MONTAJE - MOUNTING INSTRUCTIONS - MONTAGEANLEITUNG


1

DISASSEMBLY
DESMONTAJE

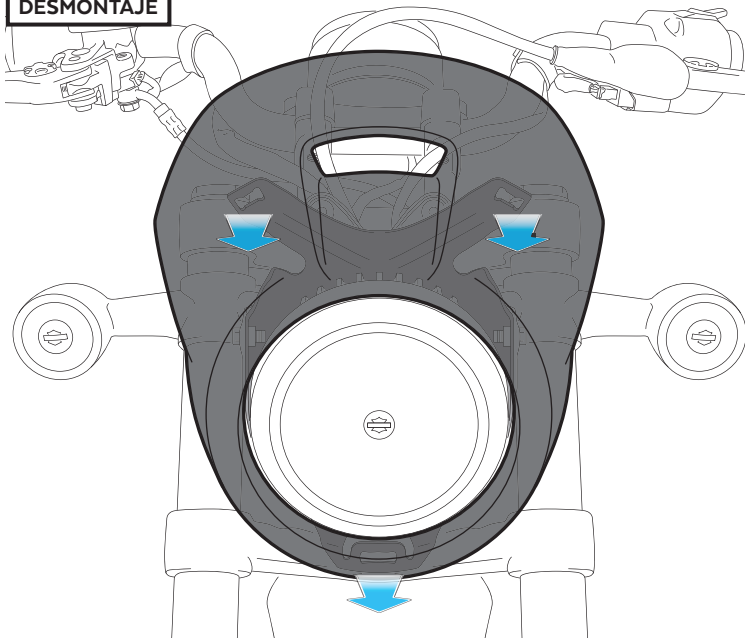


2

DISASSEMBLY
DESMONTAJE

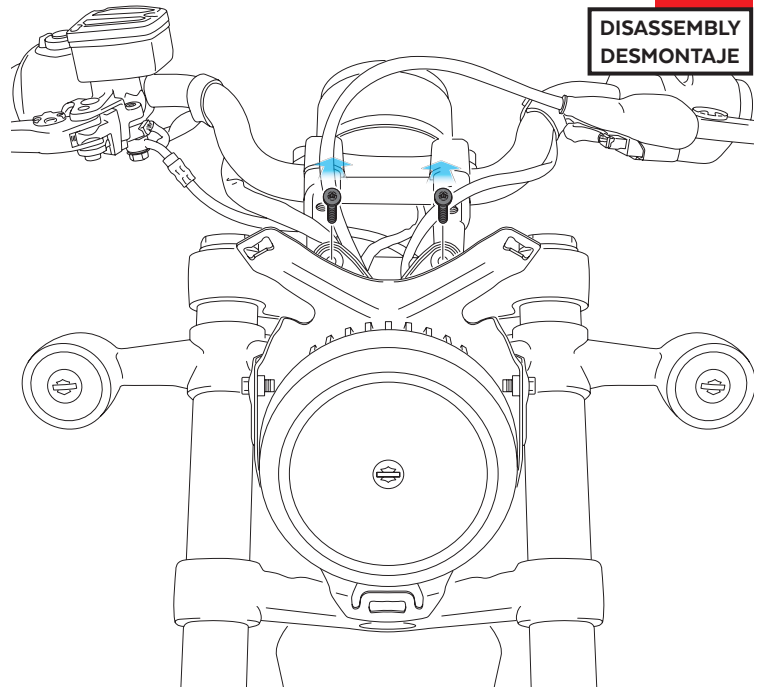

3

ASSEMBLY
MONTAJE

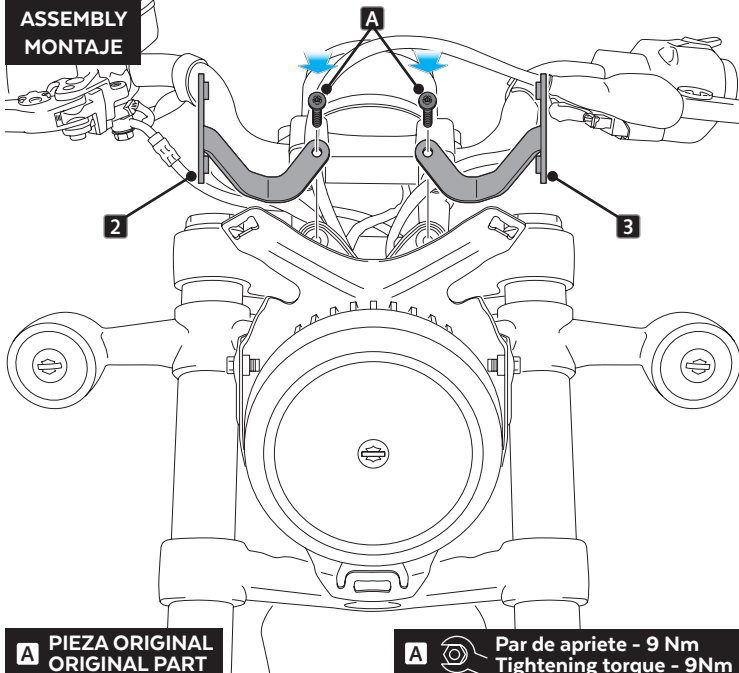


A PIEZA ORIGINAL
ORIGINAL PART

A Par de apriete - 9 Nm
Tightening torque - 9Nm

4

ASSEMBLY
MONTAJE

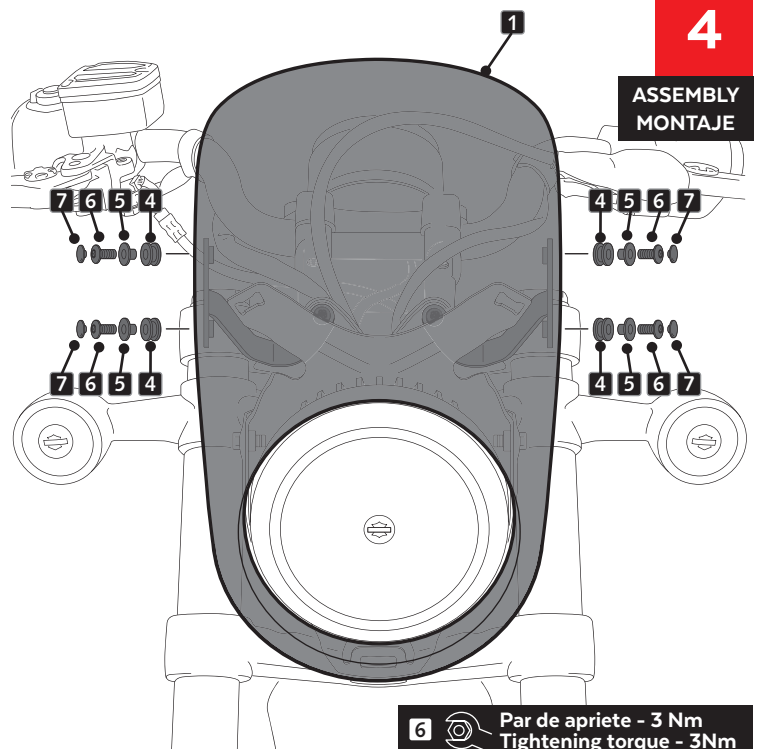

6 Par de apriete - 3 Nm
Tightening torque - 3Nm