

BMW R1300GS'23- / R1300GS ADVENTURE '24-

M O U N T I N G I N S T R U C T I O N S

REF 22338J


TAPA GPS / GPS COVER


1 Person


20 min


EASY



ALLEN

Nº 4

TORX

T30


ID.	PIEZA/PART	DESCRIPCIÓN	DESCRIPTION	QTY.	REF.:
1		Tapa Gps	Gps cover	1	22338JM3
2		Casquillo con valona Ø15xØ9x7,5	Ø15x Ø9 x7,5 Bush with flange	2	CASQUI-1A---324
3		Silentblock Ø18xØ9xØ11x7,5	Ø18x Ø9 xØ11 x7,5 silentblock	2	SILENBGONE--064
4		Tornillo Allen M6x60 Ø11 ISO 7380	M6x60 Ø11 ISO 7380 Allen screw	2	TORNI-I7380-949
5		Casquillo Ø8,5xØ13x3,5	Ø 8,5x Ø 13x 3,5 arrowhead	2	CASQUI-----775
6		Espuma adhesiva protectora 10x15mm	10x15mm adhesive protection foam	4	ESPUMA-----264

BMW R1300GS'23- / R1300GS ADVENTURE '24-

INSTRUCCIONES DE MONTAJE - MOUNTING INSTRUCTIONS - MONTAGEANLEITUNG


1

DISASSEMBLY
DESMONTAJE

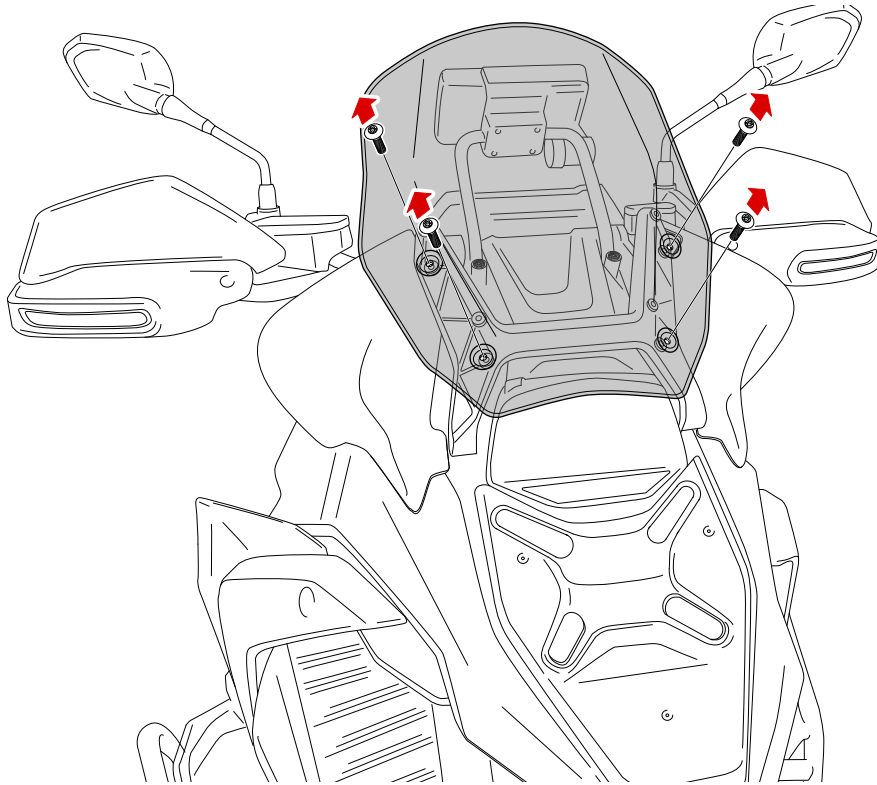

2

DISASSEMBLY
DESMONTAJE


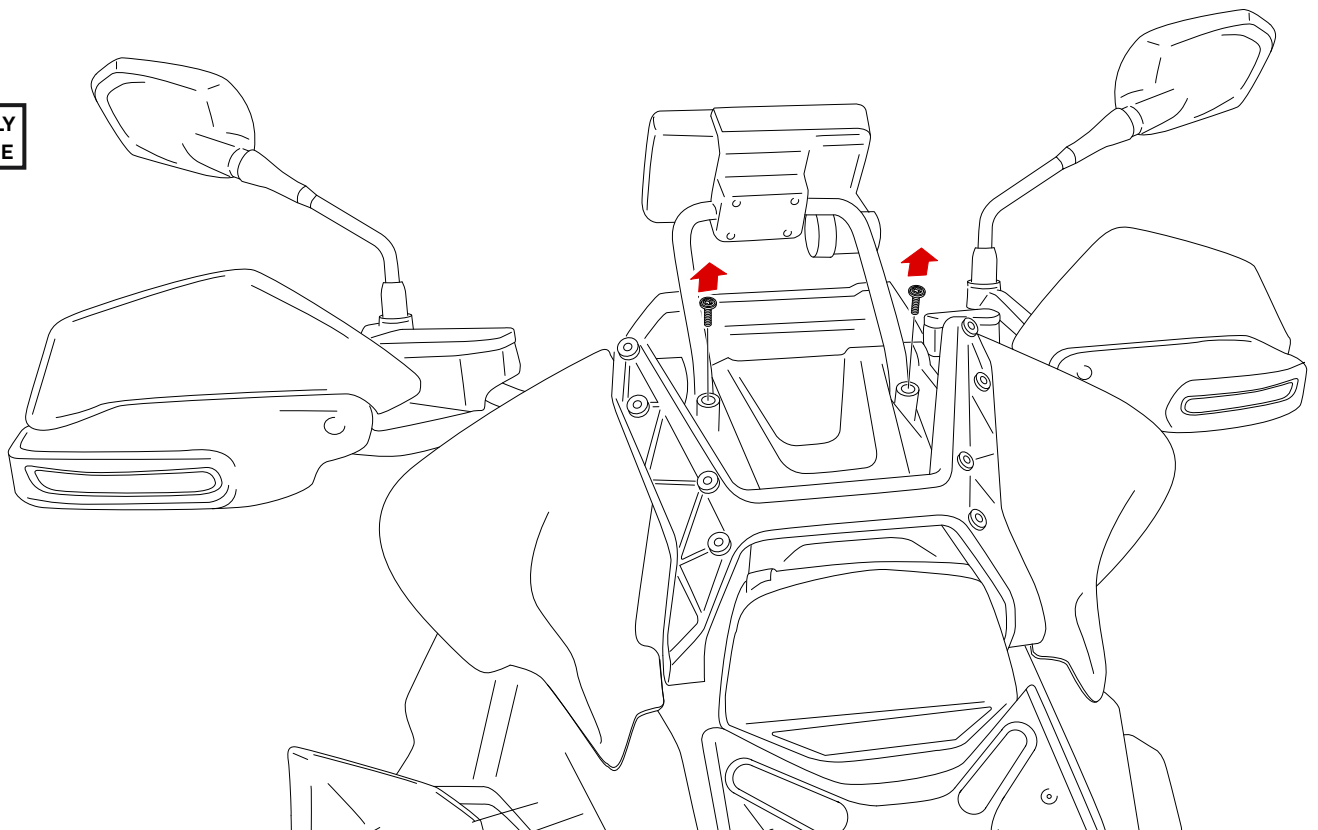


BMW R1300GS'23- / R1300GS ADVENTURE '24-

INSTRUCCIONES DE MONTAJE - MOUNTING INSTRUCTIONS - MONTAGEANLEITUNG


3

ASSEMBLY
MONTAJE

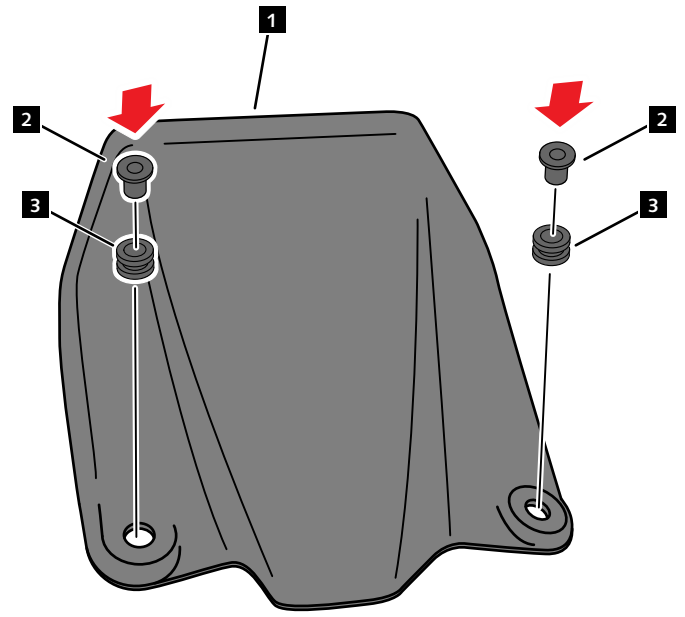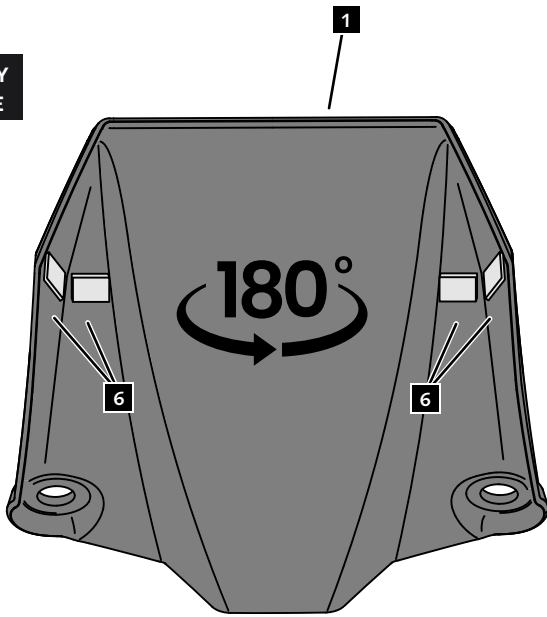

4

ASSEMBLY
MONTAJE

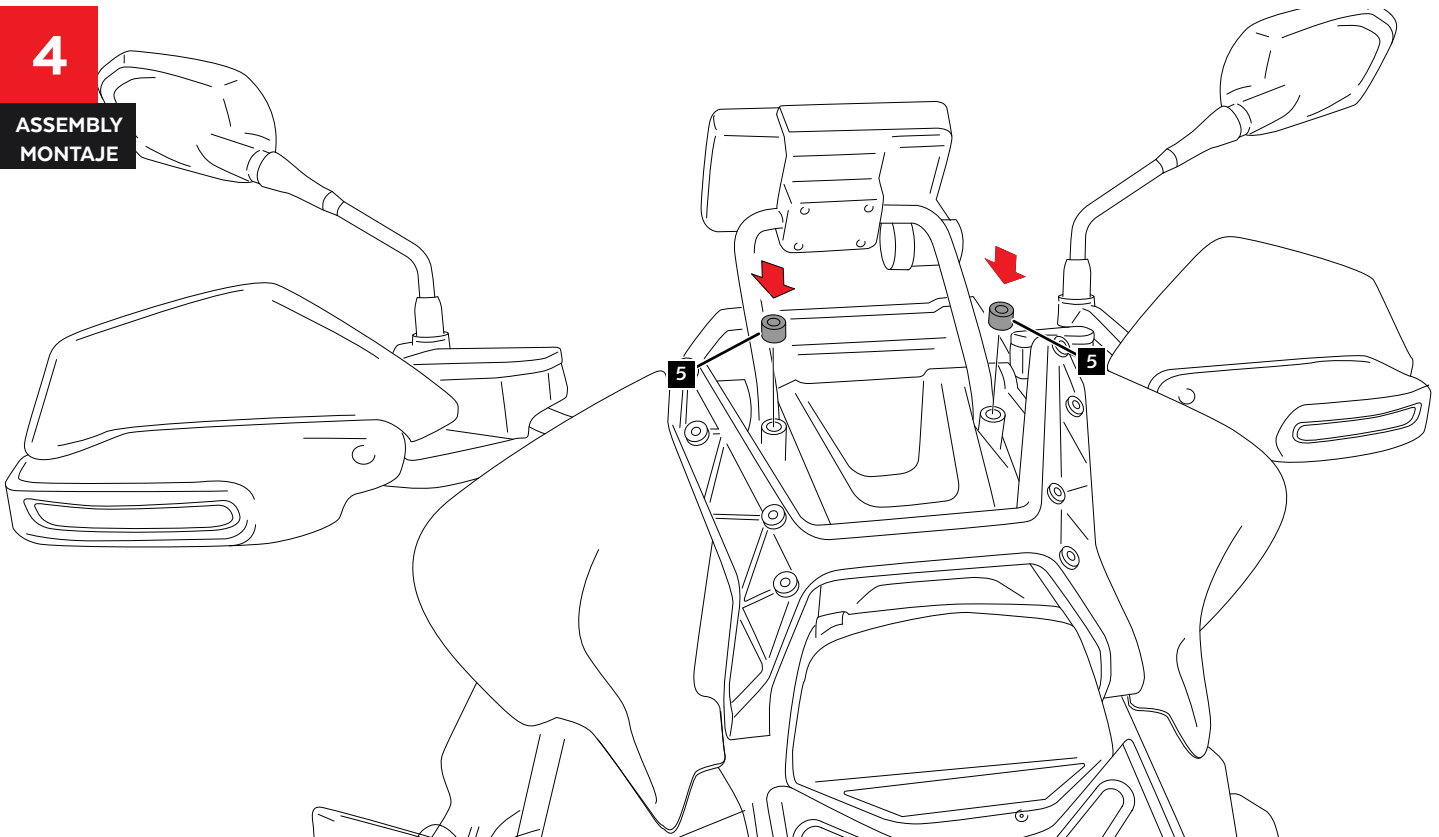


BMW R1300GS'23- / R1300GS ADVENTURE '24-

INSTRUCCIONES DE MONTAJE - MOUNTING INSTRUCTIONS - MONTAGEANLEITUNG


5

ASSEMBLY
MONTAJE

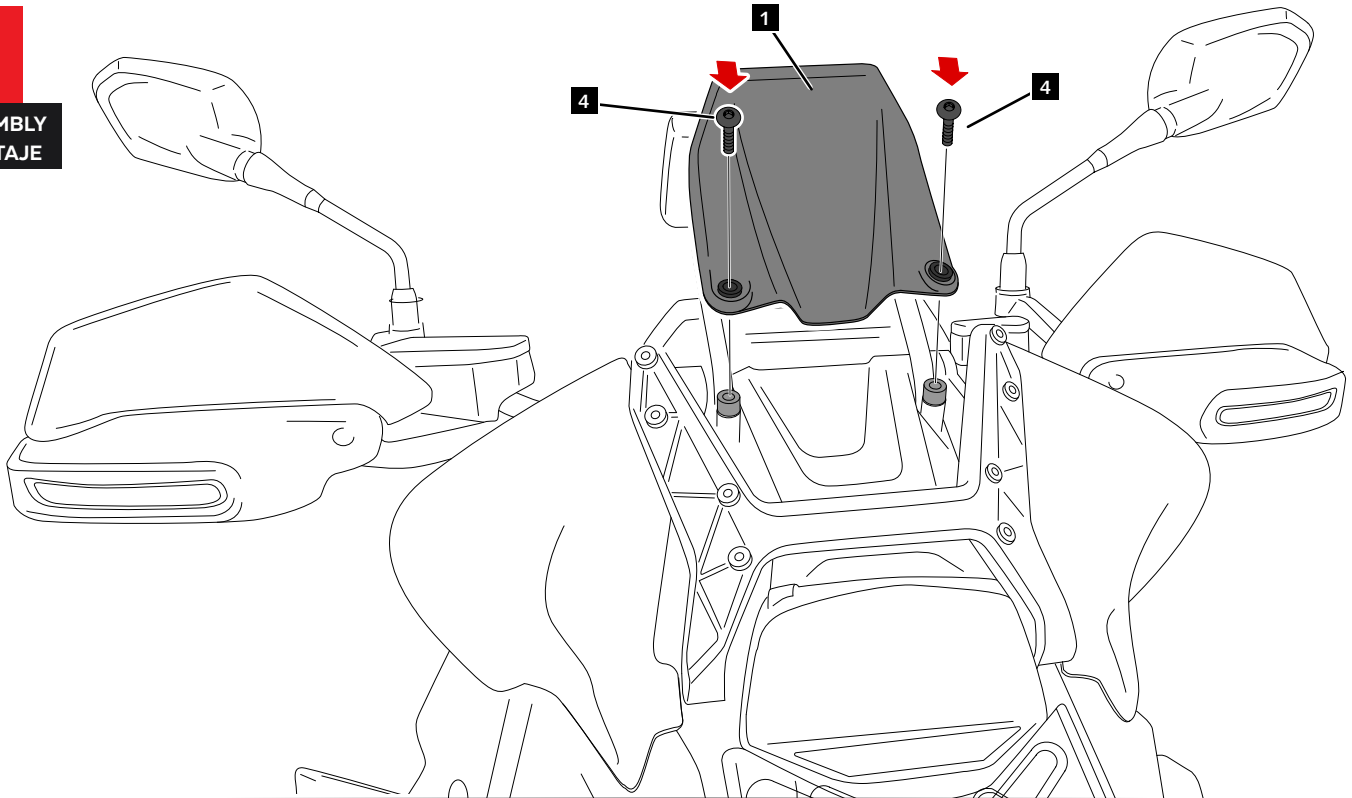

6

ASSEMBLY
MONTAJE

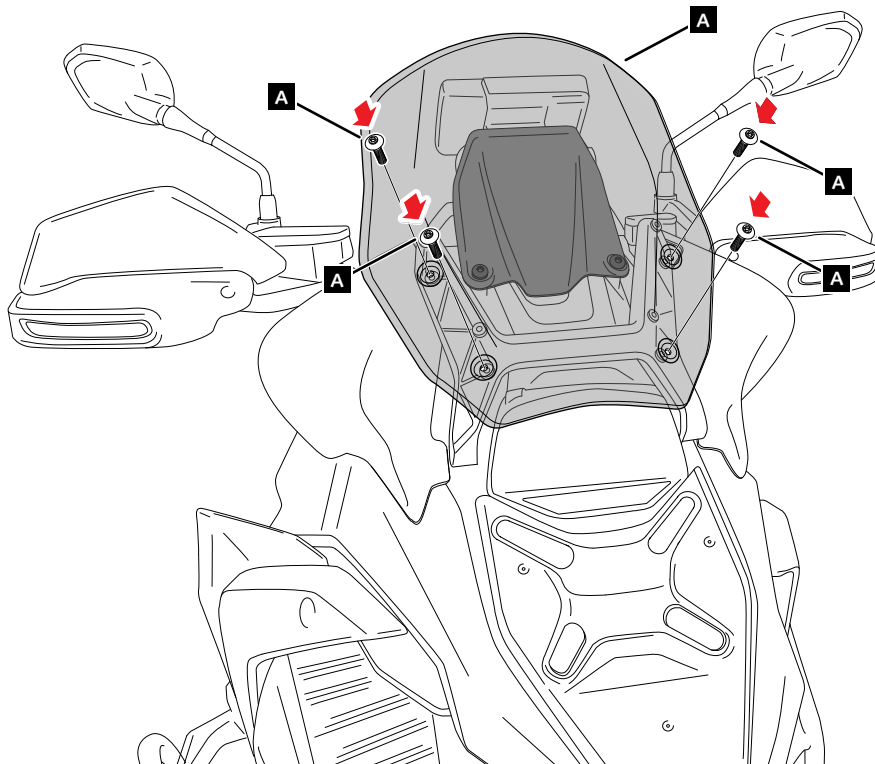

A Tornillería original
Original screws