

# DUCATI PANIGALE V2 '20- / PANIGALE V4/S '18-19 / SUPERSPORT 950 '21-

M O U N T I N G I N S T R U C T I O N S

VIDEO

REF 20431

DOWNFORCE RACE SPOILERS



1 Person



15 min










EASY



PANIGALE V2/V4/S



SUPERSPORT 950

ID	PIEZA/PART	DESCRIPCIÓN	DESCRIPTION	QTY	REF
1		Alerón Derecho	Right spoiler	1	20431R/NM3
2		Pieza soporte alerón ( Tamaño grande)	Spoiler support piece ( big size)	2	SOPOR-S---20431
3		Pieza soporte alerón ( tamaño pequeño)	Spoiler support piece ( small size)	2	SOPOR-I---20431
4		Alerón Izquierdo	Left spoiler	1	20431R/NM3
5		Plantilla electrostática DUCATI PANIGALE V2/V4/S	Electrostatic Template DUCATI PANIGALE V2/V4/S	1	PLANT-A---20431
6		Plantilla electrostática DUCATI SUPERSPORT	Electrostatic Template DUCATI SUPERSPORT	1	PLANT-B---20431
7		Lápiz AP111 Adhesion promoter	AP111 adhesion promoter Pen	1	KITNETEJA-----

# DUCATI PANIGALE V2 '20- / PANIGALE V4/S '18-19 / SUPERSPORT 950 '21-

## INSTRUCCIONES DE MONTAJE - MOUNTING INSTRUCTIONS - MONTAGEANLEITUNG

**1**

Se muestra el montaje del lado izquierdo a modo de ejemplo, realizar los mismos pasos para el montaje del lado derecho.  
The left side assembly is shown as an example, so the same steps can be performed for the right side assembly.

ASSEMBLY  
MONTAJE

CLEAN THE SURFACE  
WITH NATURAL SOAP.



PRESS HARD THE PEN ID7  
UNTIL THE GLASS INSIDE  
BREAKS AND  
THE FLUID FLOWS




**7**

APPLY THE PEN  
ONLY ON SPOILER  
SUPPORT PIECE  
AREA.



CHECK IS COMPLETELY DRY  
BEFORE START.

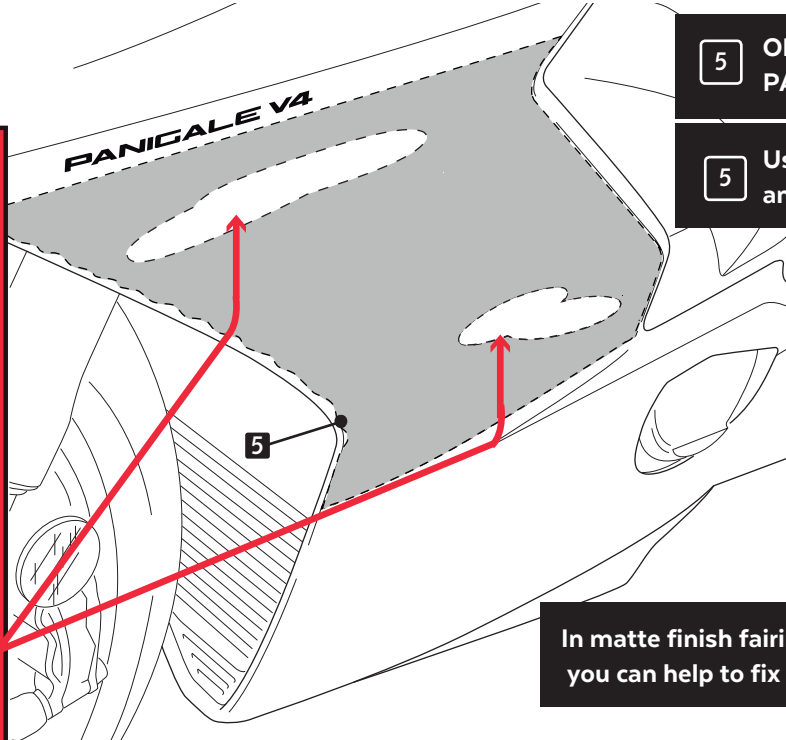

**5** ONLY FOR MOTORBIKES:  
PANIGALE V2/ PANIGALE V4

**5** Use the same template for the left  
and right side

In matte finish fairings, the template may not stick,  
you can help to fix it with adhesive tape

**1**

ASSEMBLY  
MONTAJE

CLEAN THE SURFACE  
WITH NATURAL SOAP.



PRESS HARD THE PEN ID7  
UNTIL THE GLASS INSIDE  
BREAKS AND  
THE FLUID FLOWS




**7**

APPLY THE PEN  
ONLY ON SPOILER  
SUPPORT PIECE  
AREA.



CHECK IS COMPLETELY DRY  
BEFORE START.

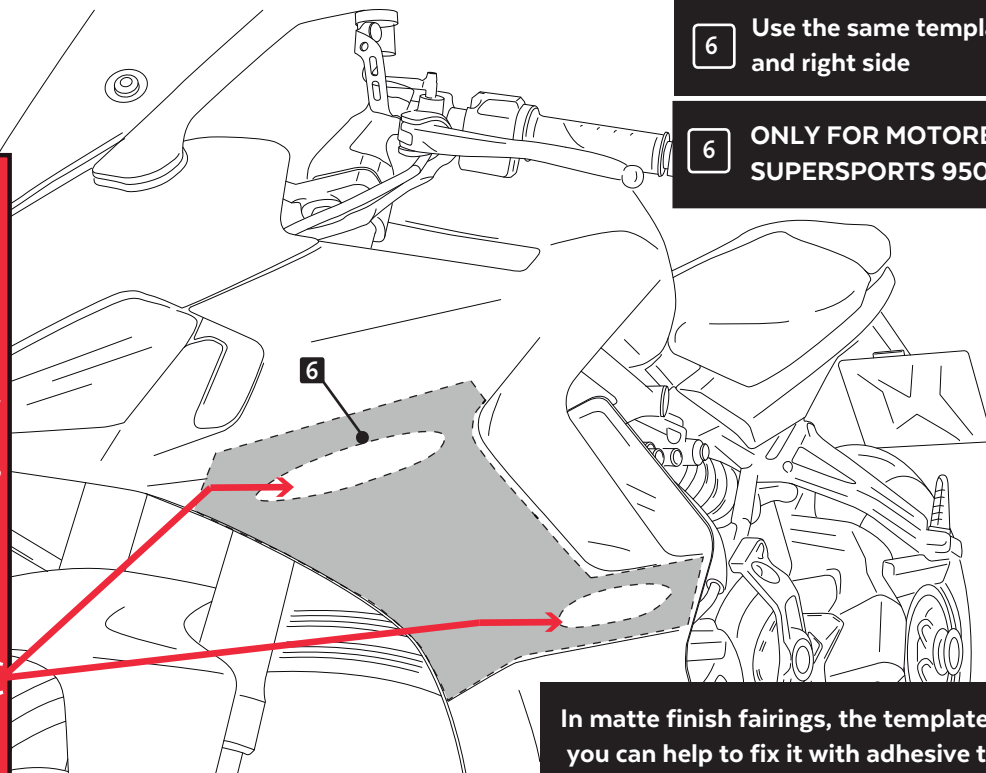

**6** Use the same template for the left  
and right side

**6** ONLY FOR MOTORBIKE:  
SUPERSPORTS 950 '21-

In matte finish fairings, the template may not stick,  
you can help to fix it with adhesive tape



# DUCATI PANIGALE V2 '20- / PANIGALE V4/S '18-19 / SUPERSPORT 950 '21-

INSTRUCCIONES DE MONTAJE - MOUNTING INSTRUCTIONS - MONTAGEANLEITUNG

**2**

ASSEMBLY  
MONTAJE


⚠ CAUTION WITH THE TEMPLATE POSITION

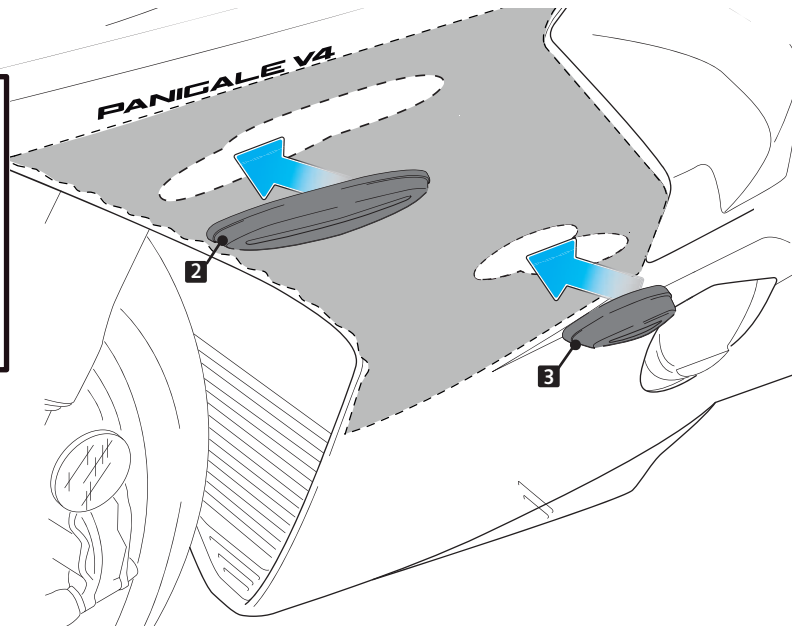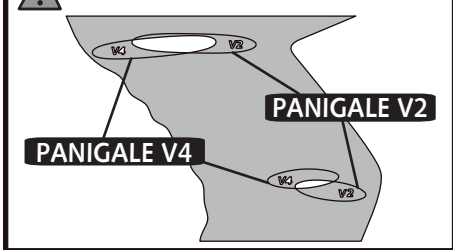



**3**

ASSEMBLY  
MONTAJE

**3.1** DOBLAR LOS EXTREMOS DE LA PIEZA  
FOLD THE ENDS OF THE PIECE

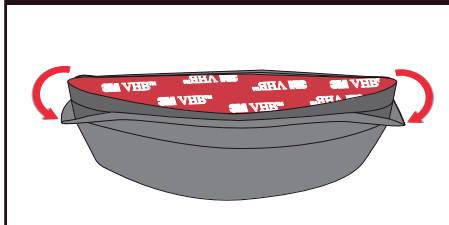

**3.2** EXTRAER PAPEL DEL ADHESIVO 3M  
REMOVE PAPER FROM 3M ADHESIVE

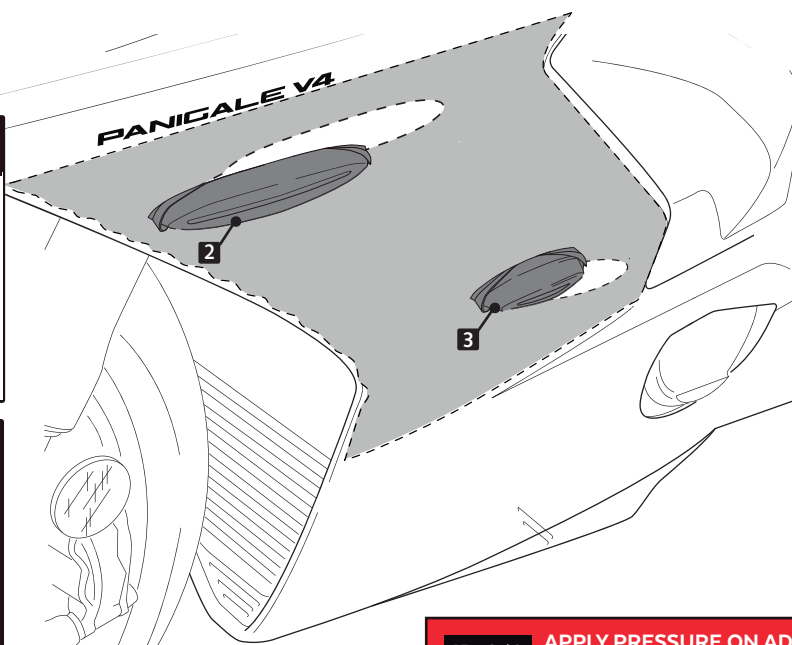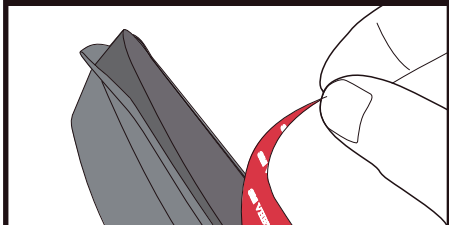

**ID.3/2** APPLY PRESSURE ON ADHESIVE AREA FOR  
1 MINUT

# DUCATI PANIGALE V2 '20- / PANIGALE V4/S '18-19 / SUPERSPORT 950 '21-

INSTRUCCIONES DE MONTAJE - MOUNTING INSTRUCTIONS - MONTAGEANLEITUNG

4

ASSEMBLY  
MONTAJE


WAIT 24 HOURS



CHECK THE CORRECT ADHESION  
OF THE 3M DOUBLE SIDE  
SELF-ADHESIVE TAPE  
TO THE FAIRING. ENSURE THAT  
THE ENTIRE SURFACE  
IS WELL ADHERED

5

ASSEMBLY  
MONTAJE

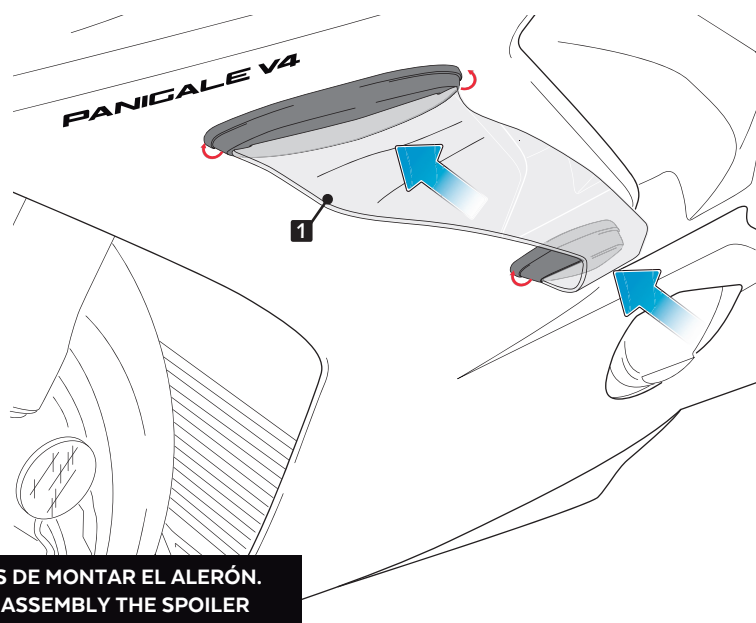

**ID5/6** EXTRAER PLANTILLA ANTES DE MONTAR EL ALERÓN.  
REMOVE TEMPLATE BEFORE ASSEMBLY THE SPOILER