

# HONDA

## CRF1100L AFRICA TWIN ADVENTURE SPORTS'20-

### M O U N T I N G I N S T R U C T I O N S

REF 3821

HEADLIGHT PROTECTOR



1 Person



20 min



EASY




ALLEN  
Nº 2,5  
Nº 3  
Nº 5



| ID | PIEZA/PART | DESCRIPCIÓN   | DESCRIPTION   | QTY | REF              |
|----|------------|---|---|-----|------------------|
| 1  |            | Protector de faro policarbonato                           | Polycarbonate headlight protector                       | 1   | 3821WM3          |
| 2  |            | Soporte metálico central                                  | Central metal support                                   | 1   | SOPOR3P3-C-3821  |
| 3  |            | Soporte metálico derecho ( R )                            | Right metal support ( R )                               | 1   | SOPOR3P3-R-3821  |
| 4  |            | Soporte metálico izquierdo ( L )                          | Left metal support ( L )                                | 1   | SOPOR3P3-L-3821  |
| 5  |            | Tornillo Allen M4x8 ISO7380 (negro)                       | M4x8 ISO7380 Allen screw (black)                        | 6   | TORNI-I7380-757  |
| 6  |            | Arandela de nylon M4                                      | M4 nylon washer   | 12  | ARNV000000000311 |
| 7  |            | Tornillo Allen M5x16 Ø11 ISO 7380                         | M5x16 Ø11 ISO 7380 Allen screw                          | 2   | TORNI-I7380-493  |
| 8  |            | Cinta adhesiva doble cara 10x30mm (se suministra montada) | 10x30mm double-sided adhesive tape (supplied assembled) | 3   | ADHESI-----263   |

# HONDA CRF1100L AFRICA TWIN ADVENTURE SPORTS'20-


INSTRUCCIONES DE MONTAJE - MOUNTING INSTRUCTIONS - MONTAGEANLEITUNG

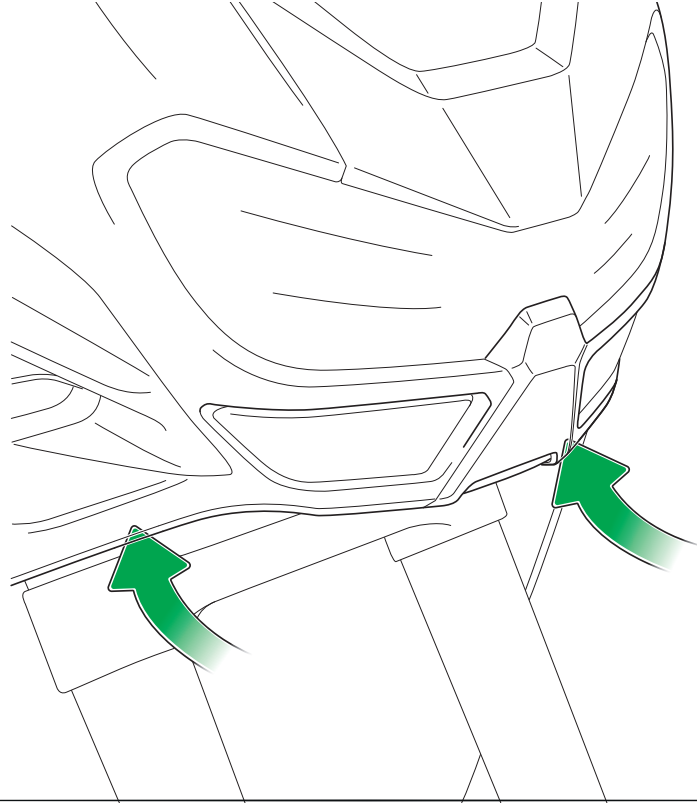

1


DISASSEMBLY  
DESMONTAJE

Se muestra el montaje del lado derecho a modo de ejemplo, realizar los mismos pasos para el montaje del lado izquierdo.  
The right side assembly is shown as an example, so the same steps can be performed for the left side assembly.

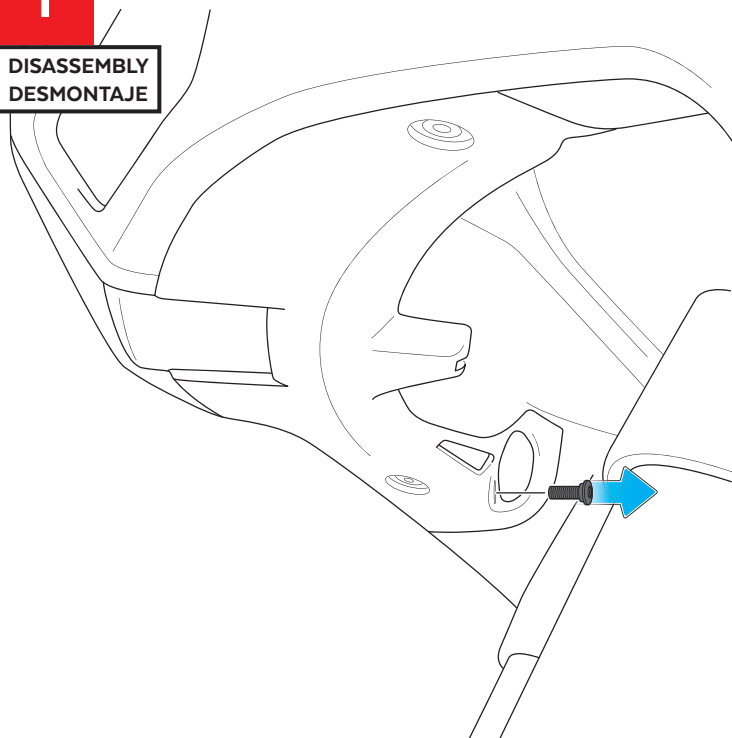

2

ASSEMBLY  
MONTAJE


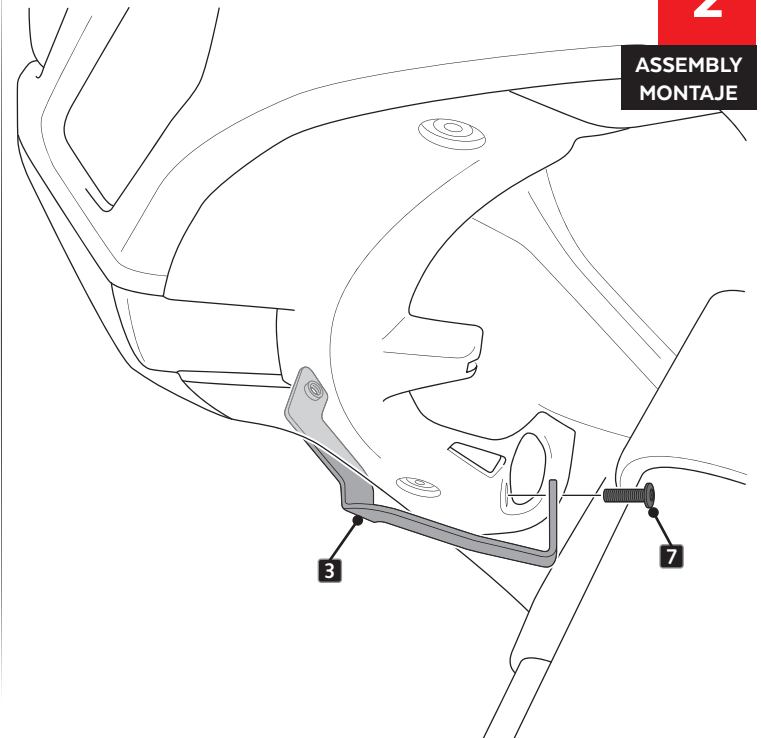


# HONDA CRF1100L AFRICA TWIN ADVENTURE SPORTS'20-

INSTRUCCIONES DE MONTAJE - MOUNTING INSTRUCTIONS - MONTAGEANLEITUNG


**3**

ASSEMBLY  
MONTAJE

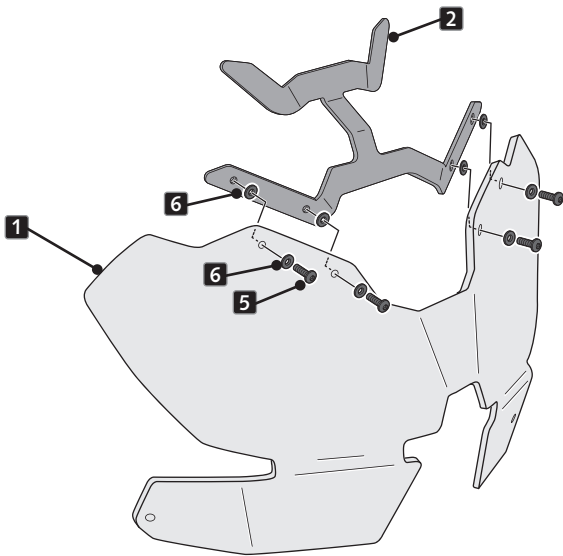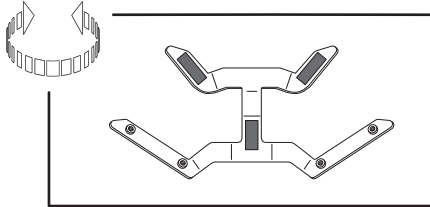



**4**

ASSEMBLY  
MONTAJE

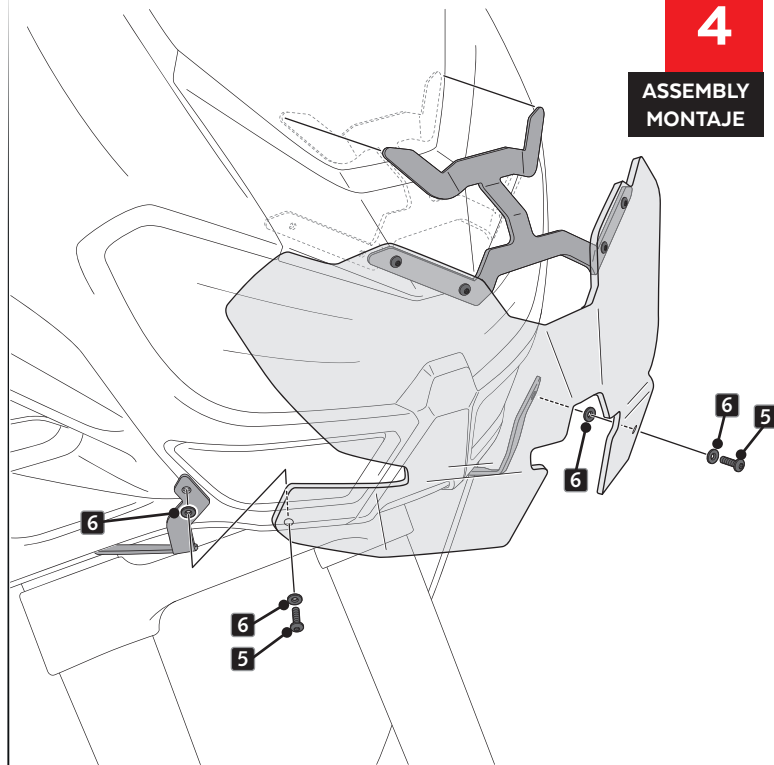

**5**

ASSEMBLY  
MONTAJE

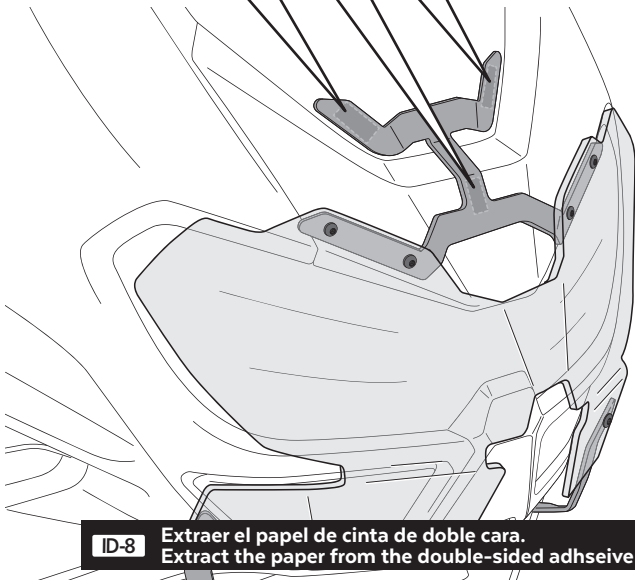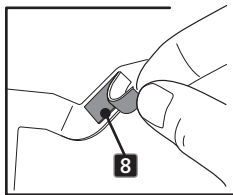

**ID-8** Extraer el papel de cinta de doble cara.  
Extract the paper from the double-sided adhesive tape.

**6**

ASSEMBLY  
MONTAJE

APPLY PRESSURE ON ADHESIVE AREA FOR 1 MINUTE. IDEAL TAPE APPLICATION IS ACCOMPLISHED WHEN TEMPERATURES IS BETWEEN 21 °C and 38 °C AND THE BOND IS ALLOWED TO DWELL 24 HOURS.

