

KTM 1290 SUPER ADVENTURE R/S '17-

M O U T I N G I N S T R U C T I O N S

REF 9470

HEADLIGHT PROTECTOR



1 Person



15 min



EASY



ALLEN
Nº 2,5
3

TORX
Nº T27

| ID | PIEZA/PART | DESCRIPCIÓN | DESCRIPTION | QTY | REF |
|----|------------|---|----------------------------------|-----|-----------------|
| 1 | | Conjunto protectores faro policarbonato | Polycarbonate protectors set | 1 | 9470WM3 |
| 2 | | Soporte metálico superior | Upper metal support | 1 | SOPOR-2P-6-9470 |
| 3 | | Soporte metálico inferior | Lower metal support | 1 | SOPOR-2P-6-9470 |
| 4 | | Tornillo ISO 7380 M4x8 (negro) | M4x8 ISO7380 allen screw | 8 | TORNI-I7380-757 |
| 5 | | Arandela de nylon M4 | M4 nylon washer | 16 | ARNV00000000311 |
| 6 | | Casquillo Ø8x Ø14x 10 | Ø8x Ø14x 10 arrowhead | 2 | CASQUI-----576 |
| 7 | | Casquillo Ø8,5x Ø14x 22 | Ø8,5x Ø14x 22 arrowhead | 2 | CASQUI-----150 |
| 8 | | Tornillo Allen M5x35 Ø11 ISO 7380 | M5x35 Ø11 ISO 7380 Allen screw | 2 | TORNI-I7380-805 |
| 9 | | Silentblock Ø9,5x Ø4,8 x7mm | Ø9,5x Ø4,8 x7mm silentblock | 8 | SILENBLOCK---90 |
| 10 | | Separador de silicona Ø12,5 x4 | Ø12,5 x4 silicon adhesive spacer | 2 | TOPE-PA12,7X3,5 |


KTM 1290 SUPER ADVENTURE R/S '17-

INSTRUCCIONES DE MONTAJE - MOUNTING INSTRUCTIONS - MONTAGEANLEITUNG

1


DISASSEMBLY
DESMONTAJE

WITHOUT AIR FILTER

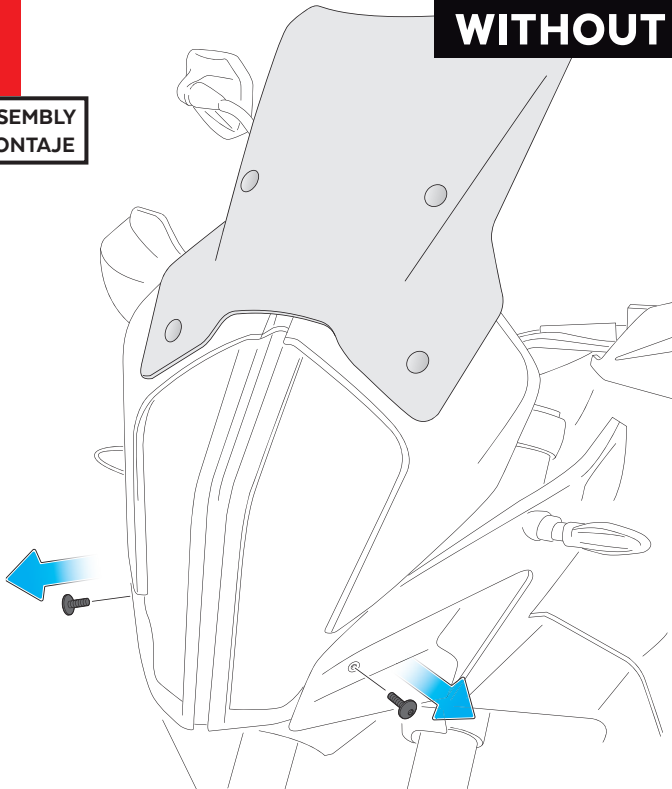


2

ASSEMBLY
MONTAJE

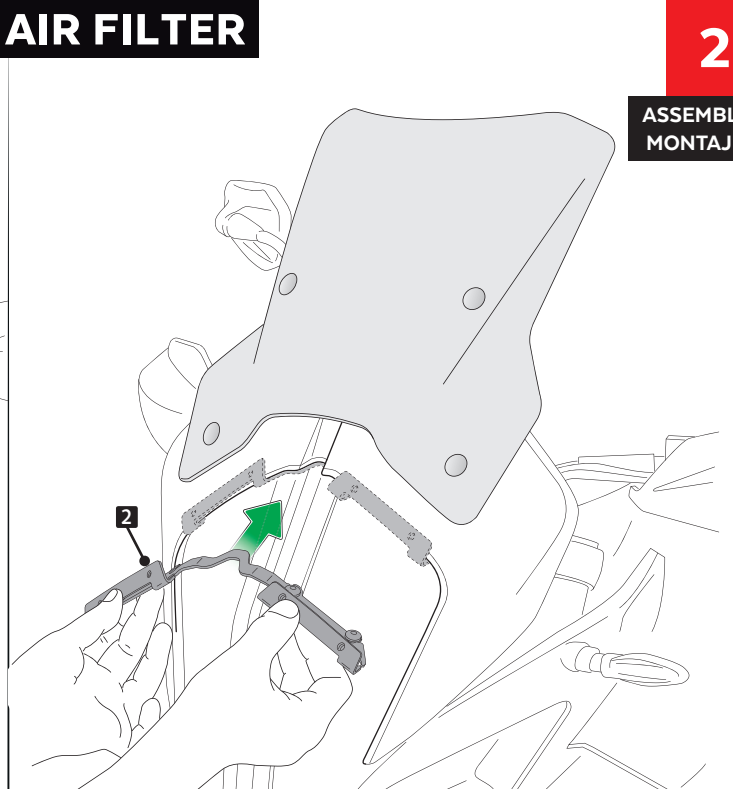


3

ASSEMBLY
MONTAJE

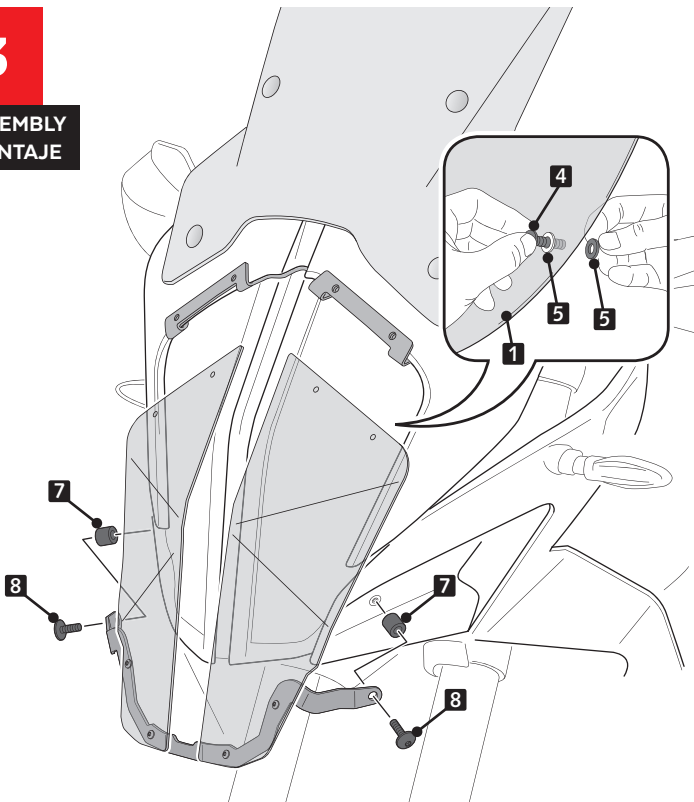

4

ASSEMBLY
MONTAJE

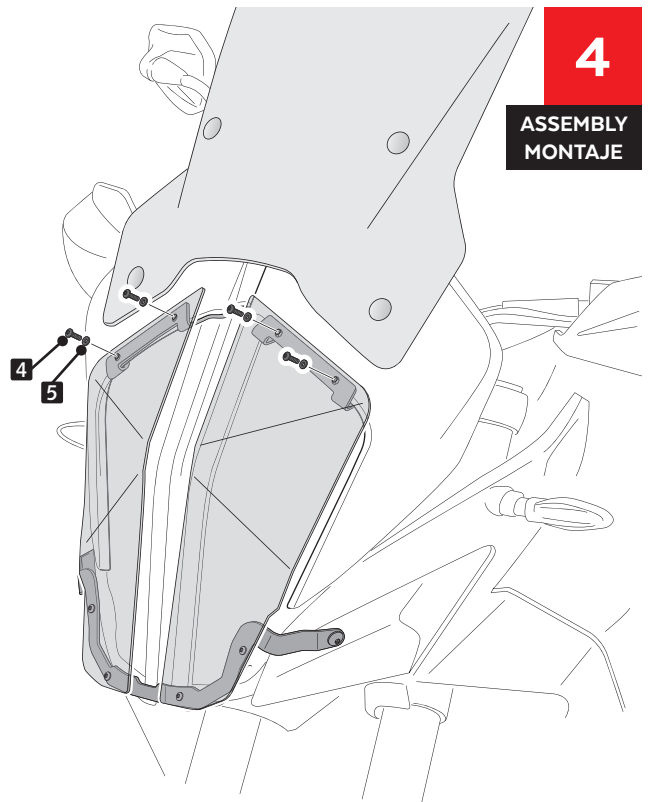


KTM 1290 SUPER ADVENTURE R/S '17-

INSTRUCCIONES DE MONTAJE - MOUNTING INSTRUCTIONS - MONTAGEANLEITUNG


1

DISASSEMBLY
DESMONTAJE

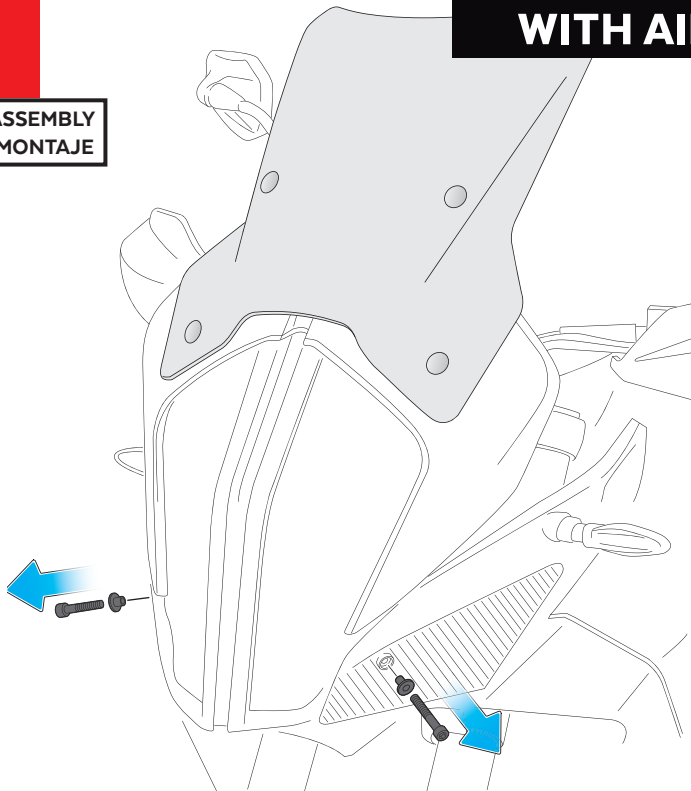


2

ASSEMBLY
MONTAJE

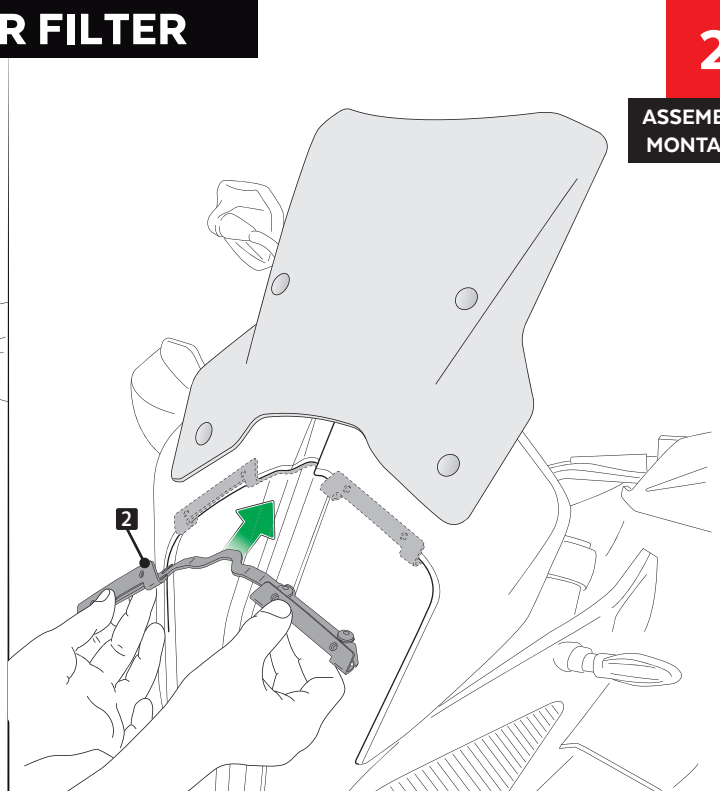


3

ASSEMBLY
MONTAJE

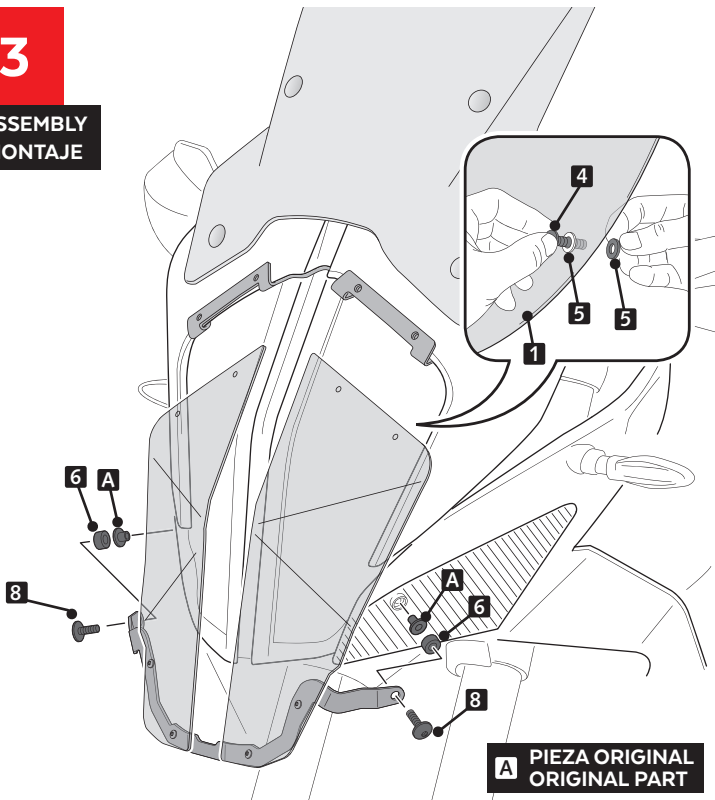

4

ASSEMBLY
MONTAJE

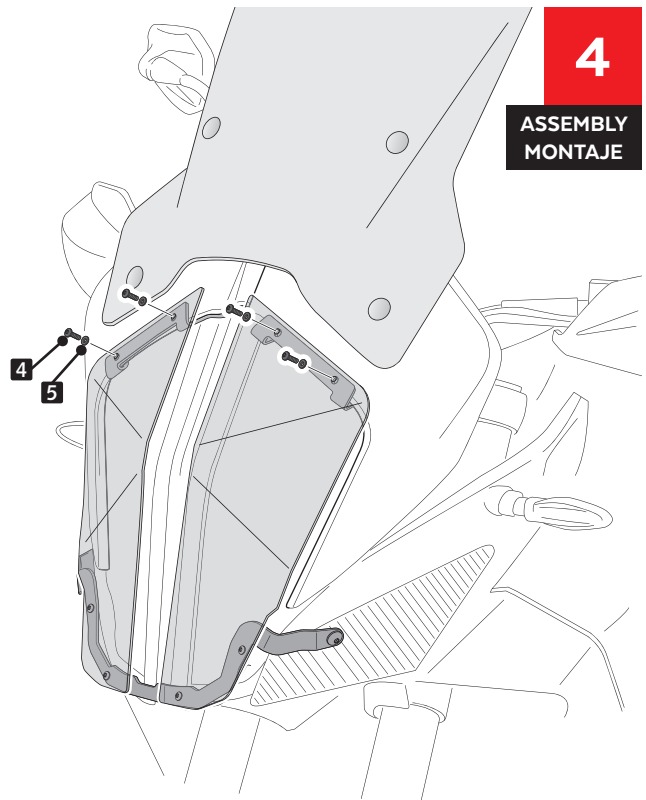

KTM 1290 SUPER ADVENTURE R/S '17-

EXPLOTING

