

DUCATI PANIGALE V2 '20- / PANIGALE V4/S '18-19 / SUPERSPORT 950 '21-

M O U N T I N G I N S T R U C T I O N S

VIDEO

REF 20431








DOWNFORCE RACE SPOILERS



PANIGALE V2/V4/S



SUPERSPORT 950

ID	PIEZA/PART	DESCRIPCIÓN	DESCRIPTION	QTY	REF
1		Alerón Derecho	Right spoiler	1	20431R/NM3
2		Pieza soporte alerón (Tamaño grande)	Spoiler support piece (big size)	2	KIT-S-----20431
3		Pieza soporte alerón (tamaño pequeño)	Spoiler support piece (small size)	2	KIT-I-----20431
4		Alerón Izquierdo	Left spoiler	1	20431R/NM3
5		Plantilla electrostática DUCATI PANIGALE V2/V4/S	Electrostatic Template DUCATI PANIGALE V2/V4/S	1	PLANT-A---20431
6		Plantilla electrostática DUCATI SUPERSPORT	Electrostatic Template DUCATI SUPERSPORT	1	PLANT-B---20431
7		Lápiz AP111 Adhesion promoter	AP111 adhesion promoter Pen	1	KITNETEJA-----

DUCATI PANIGALE V2 '20- / PANIGALE V4/S '18-19 / SUPERSPORT 950 '21-

INSTRUCCIONES DE MONTAJE - MOUNTING INSTRUCTIONS - MONTAGEANLEITUNG

Se muestra el montaje del lado izquierdo a modo de ejemplo, realizar los mismos pasos para el montaje del lado derecho.
The left side assembly is shown as an example, so the same steps can be performed for the right side assembly.

1

ASSEMBLY
MONTAJE

CLEAN THE SURFACE
WITH NATURAL SOAP.




PRESS HARD THE PEN ID7
UNTIL THE GLASS INSIDE
BREAKS AND
THE FLUID FLOWS



APPLY THE PEN
ONLY ON SPOILER
SUPPORT PIECE
AREA.



CHECK IS COMPLETELY DRY
BEFORE START.

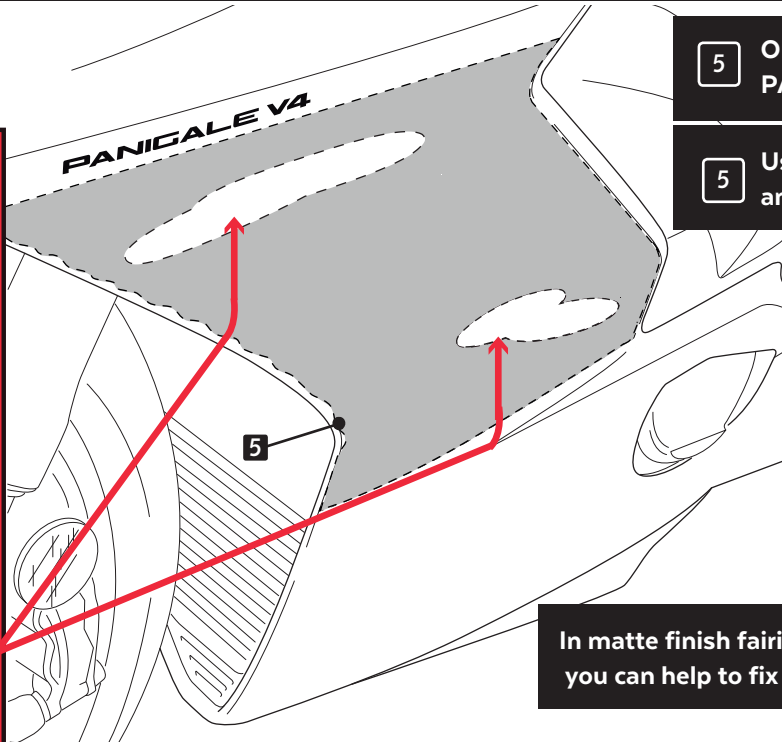

5 ONLY FOR MOTORBIKES:
PANIGALE V2/ PANIGALE V4

5 Use the same template for the left
and right side

In matte finish fairings, the template may not stick,
you can help to fix it with adhesive tape

1

ASSEMBLY
MONTAJE

CLEAN THE SURFACE
WITH NATURAL SOAP.




PRESS HARD THE PEN ID7
UNTIL THE GLASS INSIDE
BREAKS AND
THE FLUID FLOWS



APPLY THE PEN
ONLY ON SPOILER
SUPPORT PIECE
AREA.



CHECK IS COMPLETELY DRY
BEFORE START.

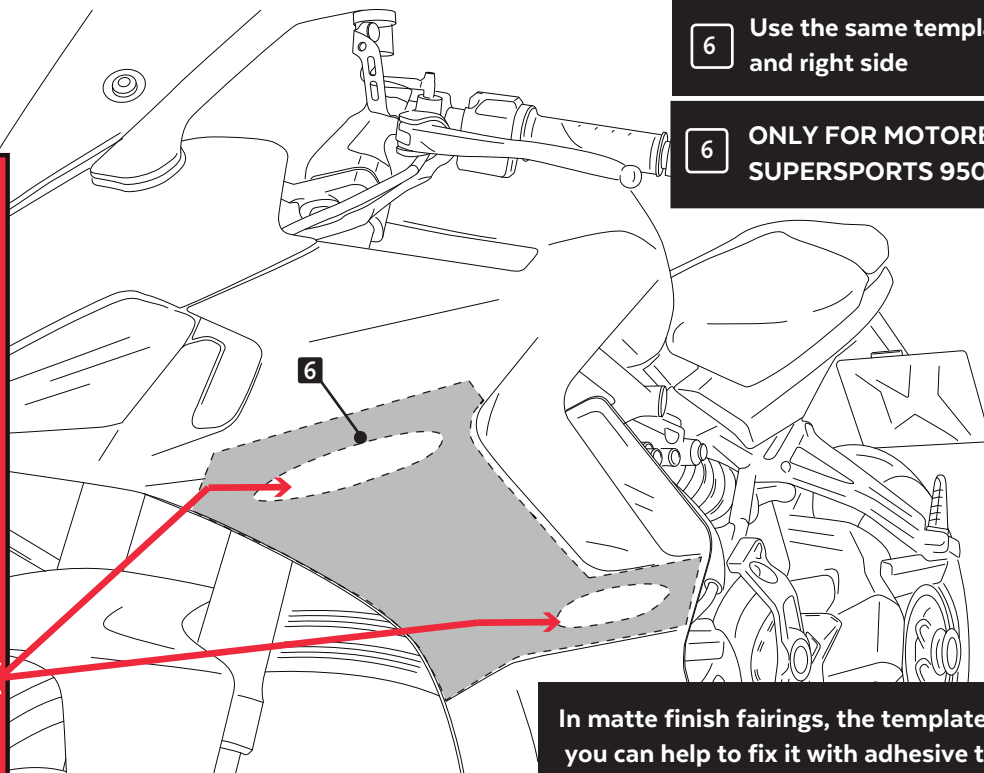

6 Use the same template for the left
and right side

6 ONLY FOR MOTORBIKE:
SUPERSPORTS 950 '21-



In matte finish fairings, the template may not stick,
you can help to fix it with adhesive tape

DUCATI PANIGALE V2 '20- / PANIGALE V4/S '18-19 / SUPERSPORT 950 '21-

INSTRUCCIONES DE MONTAJE - MOUNTING INSTRUCTIONS - MONTAGEANLEITUNG



2

ASSEMBLY
MONTAJE

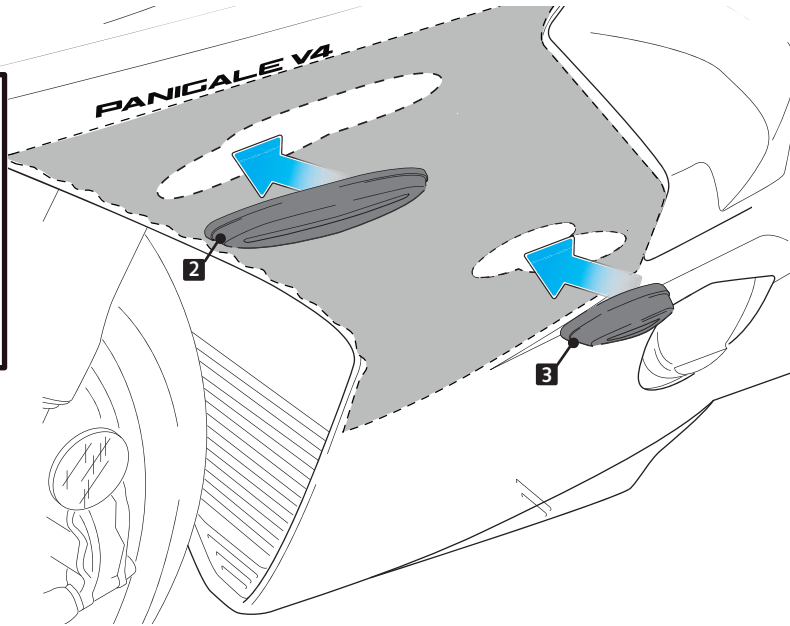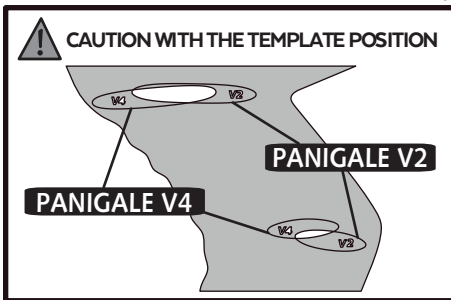

3

ASSEMBLY
MONTAJE

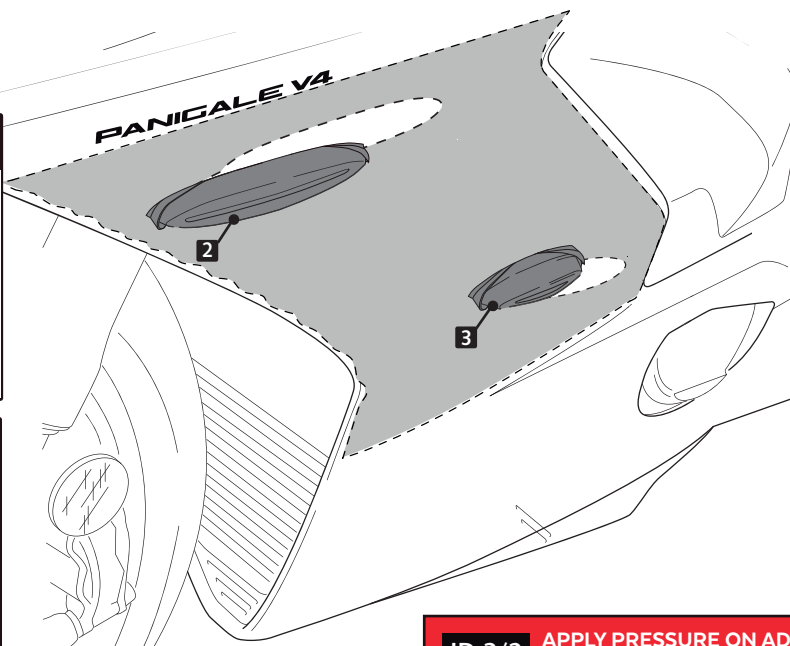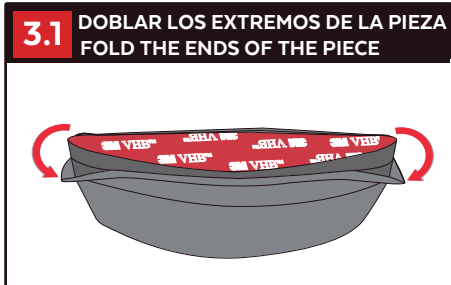

ID.3/2 APPLY PRESSURE ON ADHESIVE AREA FOR
1 MINUT

DUCATI PANIGALE V2 '20- / PANIGALE V4/S '18-19 / SUPERSPORT 950 '21-

INSTRUCCIONES DE MONTAJE - MOUNTING INSTRUCTIONS - MONTAGEANLEITUNG

4

ASSEMBLY
MONTAJE


WAIT 24 HOURS



CHECK THE CORRECT ADHESION
OF THE 3M DOUBLE SIDE
SELF-ADHESIVE TAPE
TO THE FAIRING. ENSURE THAT
THE ENTIRE SURFACE
IS WELL ADHERED

5

ASSEMBLY
MONTAJE

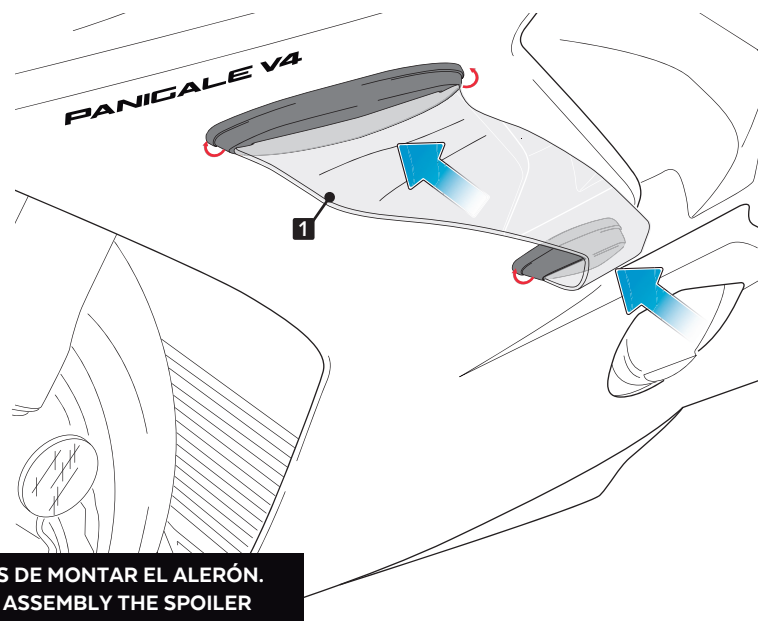

ID5/6 EXTRAER PLANTILLA ANTES DE MONTAR EL ALERÓN.
REMOVE TEMPLATE BEFORE ASSEMBLY THE SPOILER